

# CHINLITE-T USER MANUAL

CE IP20  
Indoor



REV 1.0 - 24

English Version

# Table of contents

|                               |   |
|-------------------------------|---|
| Caution! .....                | 3 |
| Introduction .....            | 3 |
| Safety instructions .....     | 3 |
| Control Menu Map .....        | 4 |
| DMX Protocol .....            | 4 |
| Fixture Cleaning.....         | 5 |
| Troubleshooting .....         | 5 |
| Technical specifications..... | 5 |

## Caution!



Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!



Avoid looking directly into the light source!

Wear protective glasses and other PPE (personal protective equipment) when working on or near the fixture.



Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label. Make sure it is grounded when using it!

Unplug mains lead before opening the housing!

Make sure that the power cord is never crimped or damaged by sharp edges. Check the fixture and the powercord from time to time.

Make sure to replace the fuse with another of the same type and rating.



For your own safety, please read this user manual carefully before you initial start-up.

Follow operating safety precautions and pay attention to warning signs methods and equipment on the user manual.



Warning! This symbol indicates a hot surface. Certain parts of the housing can become hot during operation. After use, wait for a cool-down period of at least 10 minutes before handling or transporting the device.



Indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. IP 20 rating.

The ambient temperature must always be between -5° C and +45° C.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- download the latest version of the user manual from the Internet

## Introduction

Thank you for purchasing. This is a chinlite-T, an LED chin light with even and soft light spots.

Unpack your item. Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

## Safety instructions

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and

# CHINLITE-T

warning notes written in this user manual. Always disconnect from the mains, when the device is not in use or before cleaning it. Keep away children and amateurs from the device! There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

## Control Menu Map

| Main Menu   | Level 1        | Level 2                  | Level 3 | Function Instruction      |
|-------------|----------------|--------------------------|---------|---------------------------|
| DMX         | 001-512        |                          |         | DMX address               |
| Mode        | DMX            | 1 CH                     |         | Chanel mode               |
|             |                | 7 CH                     |         |                           |
|             |                | 10CH                     |         |                           |
|             |                | 12CH                     |         |                           |
|             | Auto           | Program                  | 001-005 | Preset program            |
|             |                | Speed                    | 001-009 | Program speed, increasing |
|             | Manu           | LED 1                    | 000-255 | 0-100% Dimmer             |
|             |                | LED 2                    | 000-255 |                           |
|             |                | LED 3                    | 000-255 |                           |
| Dimmer      | Curve          | 0.3-3.0                  |         | Dimmer curves             |
|             | Mode           | Standard                 |         | Dimmer mode, standard     |
|             |                | Stage                    |         | Dimmer mode, stage        |
|             |                | TV                       |         | Dimmer mode, TV           |
|             |                | Arch                     |         | Dimmer mode, architecture |
|             |                | Theatre                  |         | Dimmer mode, theatre      |
|             |                | Studio                   |         |                           |
| Advanced    | Signal Hold    | On/Off                   |         | Run if signal cut         |
|             | Screen Timeout | 30S                      |         | Display shut off time     |
|             |                | forever                  |         |                           |
|             | Lcd Reverse    | On/Off                   |         | Display reverse 180°      |
|             | Dim Freq       | 1.20-24.00KHz adjustable |         | Dimmer frequency select   |
|             | Soft ver       | Vx.xx                    |         | Software version          |
| information | Adcanced Men   | On/Off                   |         | Advanced settings         |
|             | RDM            | On/Off                   |         |                           |
|             | DMX            | On/Off                   |         |                           |
|             | Run            | H                        |         |                           |

## DMX Protocol

| 1 Channel Mode | Function | Function Control       |
|----------------|----------|------------------------|
| CH1            | Dimmer   | 000-255: 0-100% dimmer |

  

| 7 Channel Mode | Function        | Function Control       |
|----------------|-----------------|------------------------|
| CH1            | LED 1 WW Dimmer | 000-255: 0-100% Dimmer |
| CH2            | LED 1 CW Dimmer | 000-255: 0-100% Dimmer |
| CH3            | LED 2 WW Dimmer | 000-255: 0-100% Dimmer |
| CH4            | LED 2 CW Dimmer | 000-255: 0-100% Dimmer |

|     |                 |                                     |
|-----|-----------------|-------------------------------------|
| CH5 | LED 3 WW Dimmer | 000-255: 0-100% Dimmer              |
| CH6 | LED 3 CW Dimmer | 000-255: 0-100% Dimmer              |
| CH7 | Strobe          | 000-255: Strobe, Slow to fast speed |

| 10 Channel Mode | Function             | Function Control                    |
|-----------------|----------------------|-------------------------------------|
| CH1             | Dimmer               | 000-255: 0-100% dimmer              |
| CH2             | LED 1 WW Dimmer      | 000-255: 0-100% Dimmer              |
| CH3             | LED 1 CW Dimmer      | 000-255: 0-100% Dimmer              |
| CH4             | LED 2 WW Dimmer      | 000-255: 0-100% Dimmer              |
| CH5             | LED 2 CW Dimmer      | 000-255: 0-100% Dimmer              |
| CH6             | LED 3 WW Dimmer      | 000-255: 0-100% Dimmer              |
| CH7             | LED 3 CW Dimmer      | 000-255: 0-100% Dimmer              |
| CH8             | CCT                  | 000-255: 0-100% Dimmer              |
| CH9             | Reserved CCT channel | 000-255: Reserved CCT channel       |
| CH10            | Strobe               | 000-255: Strobe, Slow to fast speed |

| 12 Channel Mode | Function             | Function Control                    |
|-----------------|----------------------|-------------------------------------|
| CH1             | Dimmer               | 000-255: 0-100% Dimmer              |
| CH2             | LED 1 WW Dimmer      | 000-255: 0-100% Dimmer              |
| CH3             | LED 1 CW Dimmer      | 000-255: 0-100% Dimmer              |
| CH4             | LED 2 WW Dimmer      | 000-255: 0-100% Dimmer              |
| CH5             | LED 2 CW Dimmer      | 000-255: 0-100% Dimmer              |
| CH6             | LED 3 WW Dimmer      | 000-255: 0-100% Dimmer              |
| CH7             | LED 3 CW Dimmer      | 000-255: 0-100% Dimmer              |
| CH8             | Reserved CCT channel | 000-255: Reserved CCT channel       |
| CH9             | Strobe               | 000-255: Strobe, Slow to fast speed |
| CH10            | Auto                 | 000-255: Auto                       |
| CH11            | Auto Speed           | 000-255: Auto Speed                 |
| CH12            | Dimmer Mode          | 000-255: Dimmer Mode                |

## Fixture Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses and mirror should be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew). In heavy club use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp output.

To clean the fixture:

1. Disconnect the fixture from power and allow it to cool for at least 10 minutes.
2. Vacuum or gently blow away dust and loose particles from the outside of the fixture with low-pressure compressed air.
3. Clean the surfaces by wiping gently with a soft, clean lint-free cloth moistened with a weak detergent solution. Do not rub glass surfaces hard: lift particles off with a soft repeated press. Dry with a soft, clean, lint-free cloth or low-pressure compressed air. Remove stuck particles with an unscented tissue or cotton swab moistened with glass cleaner or distilled water.
4. Check that the fixture is dry before reapplying power.

# CHINLITE-T

---

## Troubleshooting

Listed below are a few common problems that you may encounter, with solutions.

### The fixture does not work, no light

Check the connection of power and main fuse. Be sure the external fuse has not blown.

Measure the mains voltage on the main connector.

## Technical specifications

|                    |                                          |
|--------------------|------------------------------------------|
| Model              | Chinlite-T                               |
| Power supply:      | AC110-240V, 50/60Hz                      |
| Color temperature: | 2600K-6000K                              |
| Power connection:  | Powercon in & out                        |
| Signal connection: | 3+5 pin XLR in & out                     |
| DMX channels:      | 1/7/10/12                                |
| Control mode:      | RDM, DMX                                 |
| Housing:           | Colour black                             |
| Size (lamp body) : | 350x45x65mm                              |
| N.W.:              | 0.6kg x 4 (lamp body), 0.65kg controller |
| Environment:       | IP20                                     |

Please note: All information is subject to change without prior notice.