

MOVING MINI SPOT

Suitable for use in a variety of professional and non-professional occasions,
it is the preferred choice for entertainment lighting in bars, ktvs, live rooms and other places.

USER MANUAL



REV 1.0 - 24

English Version

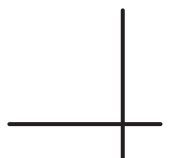


Table of contents

- Caution!3
- Introduction3
- Safety instructions.....3
- Present4
- operating menu4
- Channel Mode5
 - 9 CH5
 - 11 CH5
- Parameter6

Caution!



Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric



For your own safety, please read this user manual carefully before you initial start-up. Follow operating safety precautions and pay attention to warning signs methods and equipment on the user manual.



Indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. IP 20 rating.

The ambient temperature must be maintained between -5° C and +45° C at all times.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- download the latest version of the user manual from the Internet

Introduction

The Moving mini spot 60w is a powerful and compact entertainment light. 7 patterns, 7 colors + white, good entertainment effect. Suitable for use in a variety of professional and non-professional occasions, it is the preferred choice for entertainment lighting in bars, ktvs, live rooms and other places.

Unpack your item. Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

Safety instructions

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual. Always disconnect from the mains, when the device is not in use or before cleaning it. Keep away children and amateurs from the device! There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

MOVING MINI SPOT

Present



X: 540°
Y: 270°

Menu Key: Select Function
Up key: Parameter increment
Down key: Parameter decrement
Confirmation key: OK and save

3-Core XLR In & Out

operating menu

Menu contents	First level menu	Secondary Menu	Descriptive
DMX Address	Addr	A001 ~ A512	512 address settings
Channel Mode	CHnd	11CH	11 Channel Setting
		9CH	9 Channel Setting
Mode	SLnd	SL1	Console Mode
		Soud	Voice-activated mode
		Auto	Self-propelled mode
Effect	SHnd	SH 0	Effect0
		SH 1	Effect1
		SH 2	Effect2
		SH 3	Effect3
Sensitivity Adjustment	SEnS	0-99	Sensitivity Adjustment
Screen Display	LEd	OFF	Screen off after 5 seconds
		ON	Screen always on
Display Mode	dISP	NO	Display Positive
		YES	Display Forward
X	rPAN	NO	X motor forward
		YES	X motor reverse

MOVING MINI SPOT

Menu contents	First level menu	Secondary Menu	Descriptive
Y	rTiL	NO	Y motor forward
		YES	Y motor reverse
Reset	rESt	YES	System reset

Channel Mode

9CH

Channel	Function	Value	Function
CH1	X-axis	0-255	X-axis
CH2	Y-axis	0-255	Y-axis
CH3	Color	009-79	Color selection
		80-139	Color mix selection
		140-255	Color cycling display
CH4	Gobo	007-071	Gobo selection
		072-127	Gobo Shake and selection
		128-255	Gobo cycling display
CH5	Strobe	0-255	Strobr
CH6	Dimming	0-255	Total dimming
CH7	Speed	0-255	PAN TILT Speed of rotation
CH8	Auto	049-099	Auto run mode 1
		100-199	Auto run mode 2
		200-250	Sound controt
CH9	Reset	250-255	Reset 250-255 (5 seconds)

11CH

Channel	Function	Value	Description
CH1	X-axis	0-255	X-axis
CH2	X-axis fine tuning	0-255	X-axis fine tuning
CH3	Y-axis	0-255	Y-axis
CH4	Y-axis fine tuning	0-255	Y-axis fine tuning
CH5	Color	001-009	White
		010-019	Red
		020-029	Orange
		030-039	Lemon Yellow
		040-049	Green
		050-059	Blue
		060-069	Pink
		070-079	Sky Blue
		080-089	Sky Blue&Pink
		090-099	Pink&Blue
		100-109	Blue&Green
		110-119	Green&Lemon&Yellow
		120-129	Lemon Yellow&Orange
		130-139	Orange&Red
		140-255	Change Color automatic in turn

MOVING MINI SPOT

Channel	Function	Value	Description
CH6	Gobo	000-007	Solid
		008-015	Rose
		016-023	Radial dots
		024-031	Triangle
		032-039	Hexagon
		040-047	Swirl
		048-055	Swirl
		056-063	Jigsaw
		064-071	Solid
		072-079	Rose Jitter
		080-087	Radial dots Jitter
		088-095	Triangle Jitter
		096-103	Hexagon Jitter
		104-111	Swirl Jitter
		112-119	Swirl Jitter
		120-127	Jigsaw Jitter
		128-255	Change Gobo automatic in turn
CH7	Strobe	0-255	Strobe
CH8	Dimming	0-255	Total dimming
CH9	Speed	0-255	PAN TILT Speed of rotation
CH10	Auto	049-099	Auto run mode 1
		100-199	Auto run mode 2
		200-250	Sound control
CH11	Reset	250-255	Rest

Parameter

Product:	Moving mini spot
VOLTAGE:	AC90-275V, 50-60Hz
Wattage:	60W
Light Source:	LED 60W
Channel:	9/11 CH
Service life:	more than 60000 hours
X:	540°
Y:	270°

Please note: All information is subject to change without notice.