

MINI GLOW WASH

RGBWYU Battery Light

USER MANUAL



REV 1.0 - 24

English Version

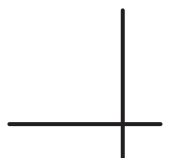


Table of contents

Caution!.....	3
Introduction	3
Safety instructions.....	3
Safety specifications.....	4
Battery precautions	4
Wireless DMX connection.....	4
Details	5
Battery power ,status & charging	5
Well fit overview.....	6
WIFI mode of operation	6
Operation	6
DMX Channel Form.....	7
6CH.....	7
10CH.....	7
Connection of power/wire/signal	8
Appendix.....	8
Faulty Disposal.....	9
Parameter	9

Caution!



Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!



Avoid looking directly into the light source!

Wear protective glasses and other PPE (personal protective equipment) when working on or near the fixture.



Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label. Make sure it is grounded when using it!

Unplug mains lead before opening the housing!

Make sure that the power cord is never crimped or damaged by sharp edges. Check the fixture and the powercord from time to time.

Make sure to replace the fuse with another of the same type and rating.



For your own safety, please read this user manual carefully before you initial start-up.

Follow operating safety precautions and pay attention to warning signs methods and equipment on the user manual.



Warning! This symbol indicates a hot surface. Certain parts of the housing can become hot during operation. After use, wait for a cool-down period of at least 10 minutes before handling or transporting the device.



T = 45°C

Indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. IP 22 rating.

The ambient temperature must always be between -5° C and +45° C.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- download the latest version of the user manual from the Internet

Introduction

The Mini Glow Wash is a powerful and compact entertainment dye light. Good entertainment effect, suitable for use in a variety of professional and non-professional occasions, is a good choice for entertainment lighting in bars, ktv, live rooms and other places.

Unpack your item. Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

Safety instructions

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety

MINI GLOW WASH

instructions and warning notes written in this user manual. Always disconnect from the mains, when the device is not in use or before cleaning it. Keep away children and amateurs from the device! There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

Safety specifications

- 1.This device for indoor use only, the protection grade is: IP22
- 2.Installing of the light must keep a distance with any flammable objects by 5m at least. The distance between the light and the projected objects must be no less than 1m.
- 3.Please never directly install the light on the surface of the flammable objects.
- 4.The installation、operation and maintenance must be managed by the qualified professional, and make sure to operate it under the instruction of the Manual.
- 5.Make sure the work environment temperature of the light maximum 40°C , and minimum -20°C
- 6.The temperature of the light surface will up to 60°C even under the normal cooling, so never touch it by hand.
- 7.The light was designed by electric shock protection type, and must connect to the power supply system which well earthed. Furthermore, the ground wire of the light must connect to the ground wire of the power supply system, ground wire interface of the light must well connect with the light body (or light must be well earthed)
- 8.Please check if the voltage is in accordance with the rated power before installing.
- 9.Please never use the power cable which was damaged the insulation cover, meanwhile, never put the power cable on any other wire. Please pull out the power cable by handle the plug when light is stop working or cleaning, never pull out it roughly or handle the wire directly.
- 10.The light doesn't include any spare parts for repairing , please check if all the parts are well installed and screws are drove tightly before operating. It's prohibited to use the light when the cover is opened.

Note: Please make sure it is power off before any installation, repair and clean

Battery precautions

- 1.Do not short circuit the battery
- 2.Do not Mechanical shock
- 3.Prevention of short circuit within a battery pack
- 4.Do not disassemble the batteries
- 5.Do not expose the battery to heat or fire
- 6.Do not expose the battery to water or liquids
- 7.Do not use a damaged battery
- 8.Store the battery at room temperature with a charge of at least 50%
- 9.During long periods of storage, please recharge and discharge every 6 months
- 10.Please dispose of battery according to local regulations

Wireless DMX connection

The system control the building in wireless DMX, When the product connect with the Wireless DMX service, please fix the the light and the service vie pressing the small bottom beside the

wireless DMX indication, in order to ensure the effect of the wireless DMX signal, if change the master working state, please restart the slaver

Details

- 1.DMX512 console control, can be controlled via signal cable and 2.4G wireless DMX signal
- 2.Master-slave control is available online via the signal line or 2.4G wireless
- 3.WiFi phone operation control, support Android 2.3 or later, Apple iOS 4.3 or later (This feature applies to WiFi motherboard)
- 4.Phone APP Name: LEDHome (Language: software automatically recognizes the Chinese or English according to the system)
- 5.Static color choices (6 colors, dimming 0-255) + strobe function (speed adjustable 0-20)
- 6.Macro Color: 32 colors available
- 7.Color automatically change function (Speed 1-99)
- 8.Color gradually change function (Speed 1-99)
- 9.Color Suddenly change function (Speed 1-99)
- 10.Strobe function (speed 1-99)
- 11.4 kinds of sound active function (Suddenly change 、 Suddenly change+Gradually change 、 Strobe) + Sound sensitivity(0-100),can be controlled via Menu and IR remote.
- 12.2.4G wireless electronic switch, can be turned on or off its power via the menu, there is to know whether open or closed wireless module through the upper left corner icon
- 13.WiFi module electronic switch can be turned on or off its power via the menu, there is to know whether open or closed WiFi module through the upper left corner icon
- 14.Balance settings, make appropriate adjustment brightness of 6 colors
- 15.Top right corner of the LCD display is battery icon, can be set on or off icons appear, if product without battery, can be set off.
- 16.Screen-savers setting: can be set as normally open or turn off the display back-light after 5 seconds, 10 seconds, 15 seconds after turning off the display back-light.
- 17.Button automatically lock: can turn on or off through the menu settings
- 18.Infrared remote control feature set: can be turned on or off through the menu settings

Battery power ,status & charging

Battery status


The LCD display the status of the battery life. please do not let the battery full die, this severely shortens the life of the battery

Battery recharge

MINI GLOW WASH

To recharge the battery, there is a switch on the bottom side, plug the provided power cord into a power outlet. when the charge indicator led full on, it means that the battery is at full charge

Well fit overview

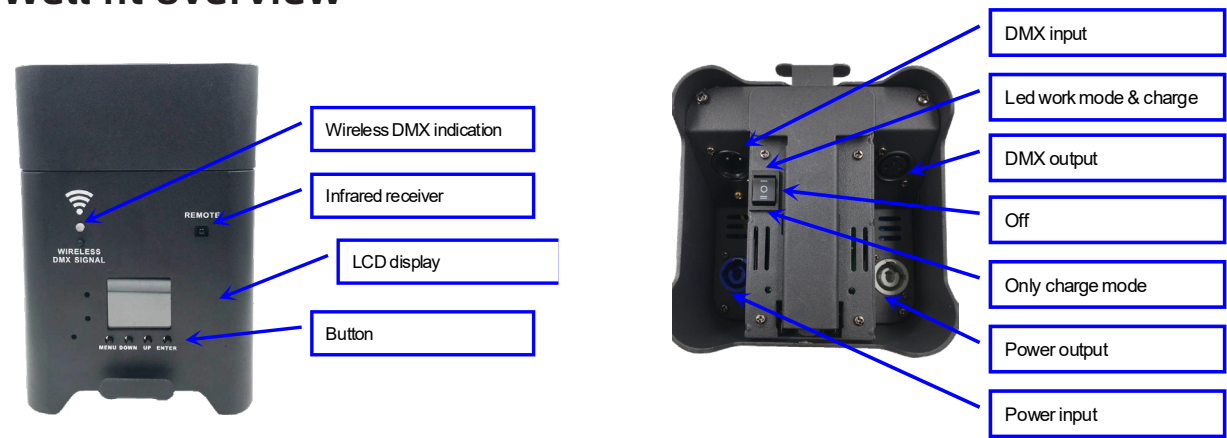

WIFI mode of operation

Select the "User Settings" mode, press the ENTER key, use the UP / DOWN key to select the "WiFi" (WIFI mode).Press ENTER button, WiFi module is turned on, then you can set your phone to make the connection control. Open the phone setup function, and find the wireless network WLAN entry, to connect the device named LED_xxx (different light will be different WLAN name)As the picture showed:

NOTE: ONE MOBILE PHONE CAN ONLY CONTORL ONE LIGHT VIE WIFI MODE, IF YOU WNAT CONTROL MORE THAN ONE LIGHT, PLEASE SET OTHERS TO DMX MODE

Operation

ITEM	DISPLAY	WORKING MODE	DETAILS	DESCRIPTION
1	DMX512		A001-A512	Press DOWN and UP to set DMX code
2	Shows	Auto Mode	Auto Color	Press [ENTER] then press [DOWN] and [UP] to change speed, 1~99
			Auto Fade	
			Auto Sudden	
			Auto Strobe	
			Wifi Mode	show Wifi QR picture, use mobile phone scan to download software
3	Sound	Sound Mode	Sound Mode1	Press ENTER then press DOWN and UP to change sensitive
			Sound Mode2	
			Sound Mode3	
			Sound Mode4	

MINI GLOW WASH

ITEM	DISPLAY	WORKING MODE	DETAILS	DESCRIPTION
4	Custom Color	Custom Color	R	Press ENTER then press DOWN and UP to dim red
			G	Press ENTER then press DOWN and UP to dim green
			B	Press ENTER then press DOWN and UP to dim blue
			W	Press ENTER then press DOWN and UP to dim white
			Y	Press ENTER then press DOWN and UP to dim yellow
			U	Press ENTER then press DOWN and UP to dim purple
		Static color	Color 1~32	32 kinds static color
5	Set	DMX channel	10CH / 6CH	Set DMX channel mode
		2.4g wireless	ON / OFF	Set wireless DMX on or off
		Infrared	ON / OFF	Set infrared on or off
		Display Back light	000-100%	Set LCD back light
		Lcd Close Time	open,5,10,15,30	If no operate, Lcd go to sleep mode
		Fan Speed	Auto, Slow, Midele, Fast	Only for factory setting
		Restore Factory		Only for factory setting
		Manual		Only for factory setting
		Temperature	ON / OFF	Set temperature on or off
		Battery	ON / OFF	Set battery on or off
		Back Ground Color	0~8	Set the LCD back ground color
	Help	information of light		

DMX Channel Form

6CH

Channel	Value	Function
1	0~255	Red, the maximum value determined by the total dimming
2	0~255	Green, the maximum value determined by the total dimming
3	0~255	Blue, the maximum value determined by the total dimming
4	0~255	White, the maximum value determined by the total dimming
5	0~255	Amber, the maximum value determined by the total dimming
6	0~255	UV, the maximum value determined by the total dimming

10CH

Channel	Value	Function
CH1	0-255	Total dimming
CH2	0-255	Dimming Red
CH3	0-255	Dimming Green
CH4	0-255	Dimming Blue
CH5	0-255	Dimming White
CH6	0-255	Dimming Yellow
CH7	0-255	Dimming Purple
CH8	0-255	Strobe from slow to fast

MINI GLOW WASH

Channel	Value	Function
CH9	0-8	No function
	9-50	Static color
	51-100	Jump mode
	101-150	Puls jump mode
	151-200	Fade mode
	201-220	Sound mode 1
	221-240	Sound mode 2
	241-255	Sound mode 3
CH10	0-255	When the value of channel 9 working in 51-200, Speed form slow to fast
	0-255	When the value of channel 9 working in 9-50,coorprate with CH9 provide 32 kinds static color

Connection of power/wire/signal

The exclusive plug should be used between the connection of light and power. Please check if the rated voltage and frequency is in accordance with the power supply. In order to make sure the power cable work in the safety environment. If found the power cable is overheat, please cut off the power and reduce the parallel connection quantity of lights, The light power supply is AC100~AC240V/50~60Hz


Make sure installation position is steady before fix the light. Professional clamp should be used when the light is reverse hanging, and drive the clamp into the screw hole which in the bracket of the light. Make sure the light will not fall from the truss, use the safety cable go through the truss and bracket of the light as a supporting, to avoid the light to fall down. There is no entrance to the work area during mounting. Periodically to check if the safety cable has fretted away or clamp is loosen. We will not take any responsibility which caused by the lighting fall of unsteady hanging.

Warning:

It is prohibited to move the light by handle the clamp, please move the light by handle

Appendix

The light is available to receive the DMX512 signal, connect the DMX connector to the panel which marked with “DMX IN” , and connect it to the next light. then, connect to the “DMX IN” of next light from the “DMX OUT” . The DMX signal terminator is recommended when the lighting signal is connecting. It will avoid to interfere the signal which caused by the electrical noise, DMX terminator is a XLR connector, connect with a 120Ω resistor between the pin 2 and pin 3 of the XLR connector, and connect it to the OUTPUT socket of the final light. see picture:

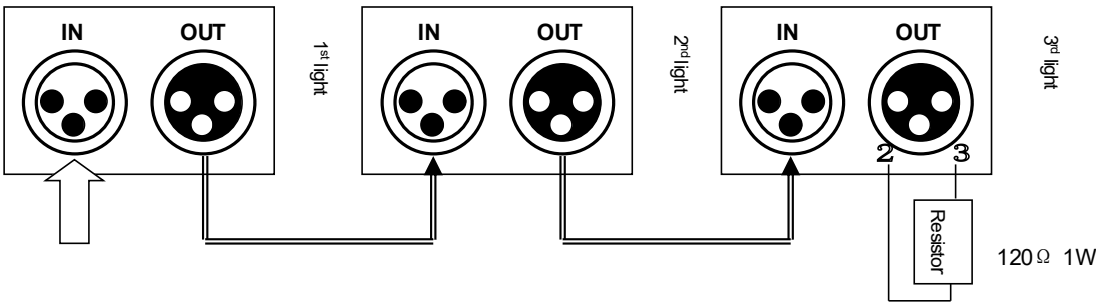

Faulty Disposal

Familiar Faulty	Disposal
No function	1. Re-charge the battery to confirm whether the battery empty
	2. Check the switch on the button to confirm the switch is on
Wireless DMX is out of control	1. Press the wireless DMX button to keep the slaver work in the same mode with the master
	2. Check the software to confirm the wireless DMX is on

Note: Please contact the supplier or ask for professional repair if it's still don't work when excluded the above faulty.

Parameter

Product:	Mini Glow Wash
Voltage:	AC100-240V, 50/60Hz
Battery charging time:	6 hours
Battery Life:	4.5 hours on full power (fully charged)
Light source:	6*18W RGBWYU
power:	108W
Control:	Auto, Master/Slave, Wireless DMX, DMX512, Sound Activated
Channel:	2 DMX modes, 6-channel mode and 10-channel mode

Please note: All information is subject to change without prior notice.