


DMX

CONTROLLER

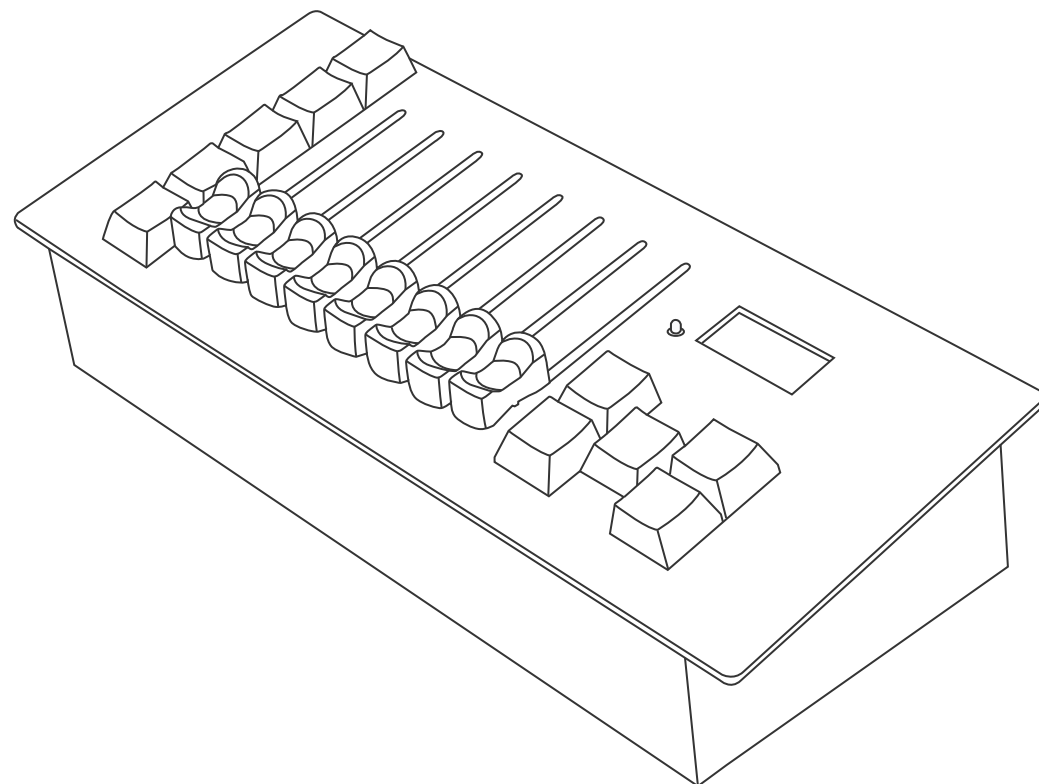

USER MANUAL

DMX


CONTROLLER

product features

- Rich in functions, simple programming methods can be easily used by beginners;
- Maximum can control 40 channels;
- Support 5 CHASE effects, each effect can have up to 50 single steps;
- With power-off memory, power-on automatically enters the mode of operation before power-off;
- When the lamp address setting is aligned to 8CH, the lamp function can be realized;
- Battery-powered, easy to use, no need to look for 220V, and compatible with the current charging method TYPE-C interface commonly used in mobile phones;
- The button has a luminous prompt, and the operating status is clear at a glance.

Product parameters

- Power input: 90-240V 50-60HZ
- Size: 260*110*55MM
- TYPE-C plug: 5V-2A
- Weight: 0.96KG

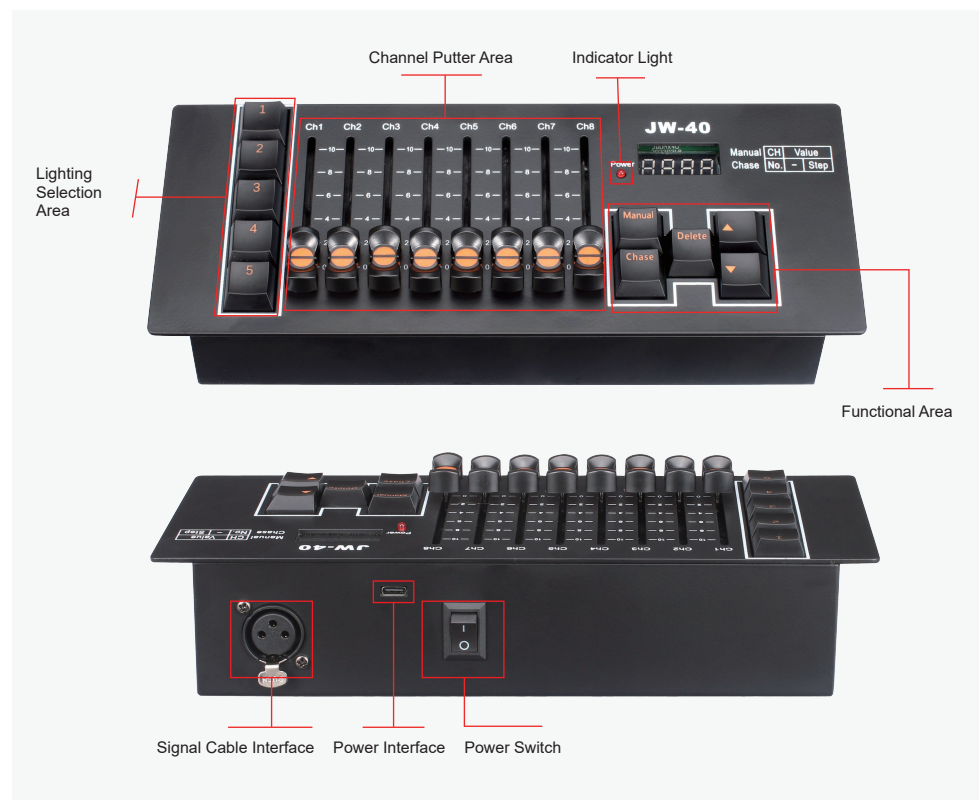

Lighting Selection Area

When in manual mode or programming, there are 5 light selection buttons, namely PAGE1-PAGE5, and the selected buttons will light up. For example, when only PAGE2 is selected, the fader area can control DMX addresses 8-16. When all are selected, push For CH1, 001/009/017/025/033 on the DMX address follow CH1 and control simultaneously. When it is set in CHASE mode, it provides 5 effect displays, at this time CH8 is the SPEED function, and CH7 is the FADE function.

Functional Area

- MANUAL ——— Manual mode
- CHASE ——— Press it to enter the CHASE mode, select the CHASE number through PAGE1-PAGE5 and play CHASE, and press and hold for 3 seconds to enter the programming mode
- DELETE ——— In program mode, delete step
- UP ——— In programming mode, add a step and preview the previous step
- DOWN ——— In programming mode, preview the next step

Manual mode introduction

In the idle state, press the MANUAL button to enter the manual mode, the button lights up, and it can support 40 DMX channels by selecting the lamp area or turning the page.

Programming Process Introduction

- Step 1: In idle state, long press the CHASE button to enter programming mode;
- Step 2: All the 5 buttons in the light selection area light up;
- Step 3: Select the corresponding press to indicate which CHASE number to program;
- Step 4: Enter the single-step editing state at this time;
- Step 5: Push the fader to set the single-step scene effect, similar to manual mode operation;
- Step 6: Press the UP key to save and enter the next step of editing;
- Step 7: Repeat step 5;
- Step 8: After editing all the steps, press the MANUAL key to exit the programming state and complete the saving.

Player mode (that is, CHASE mode)

In the idle state, press the CHASE key to enter the effect playback selection, select the corresponding CHASE number in the lamp area, push CH7 for speed, and CH8 for gradient ratio.

Product Size



CAUTION:

DO NOT OPEN
THE HOUSING
SHOCK HAZARD



- Do not allow any flammable materials, water, or metal objects to enter this machine
- If any liquid is spilled on this machine, please leave the port to switch the power on.
- If a serious operation error occurs, please stop using the machine immediately and contact your local dealer or us directly.
- Please do not disassemble the machine yourself - there are no user-usable accessories inside.
- Do not dismantle the machine without authorization, non-professionals may damage the machine or cause misoperation.

- When unpacking, please check the machine for any damage. If available, please do not use and contact your local trusted dealer directly.
- Keep packing materials (plastic bags, Styrofoam, nails, etc.) out of the reach of children.
- This machine can only be operated by adults, do not let children play with it.
- Do not use this machine in the following environments:
 - Places with high humidity
 - Places subject to shock or vibration
 - When the air temperature exceeds 45°C/113 F or falls below 2°C/35.6 F.
 - Do not expose the machine to excessive humidity or dryness
- Do not dismantle or change this machine without permission