

Water PROJECTOR

400W



USER MANUAL

**Please read the manual before installing and using this light.
Keep it for future reference.**

CONTENTS

1. Safety Instruction.....	2
2. Operation and Menu Set-up.....	3-5
3. DMX Channel.....	6
4. Specification	7



CAUTION!

This product is designed for outdoor version!
But do not use the product directly into the water!

For your own safety, please read user manual carefully before your initially start-up!

Every person involved with the installation, operation and maintenance of this device has to be qualified and

- follow the instructions in this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- include every supplementary update with the original manual

Before your initial start-up, please make sure that there is no damage during shipment.

1. SAFETY INSTRUCTION

CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

Important: Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to drastic temperature fluctuation (e.g. after a delivery), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

This device is designed for Outdoor use! It must be used in an area with good ventilation. It can not be used directly into water.

Always connect the device to the mains last. Always disconnect from the mains, when the device is not in use or before cleaning it. Check the device and the power cord from time to time. Make sure the power cord is not crimped or damaged by sharp edges.

2. OPERATION and MENU SET-UP

The main menu has four items: Settings, Manual, Information, and advance.

6CH			37℃		
A001					
Setting		Manual		Info	
				Advance	

1) "SETTING"

SETTING	
Run Mode	DMX Auto Sound Scene
Scene Set	Check below list for SCENE SET
DMX Address	000-512
Device Reset	ON/OFF
Channel Mode	6CH
Language	ENG/中文
Screen Rotation	ON/OFF
DMX Signal	CLEAR/Keep
Linear Color	ON/OFF
Clear Scene Data	OK/Cancel
Load Default	中文
--EXIT--	

SCENE SET	
Scene Select	SCENE 01-20
Scene Time	000-255
Auto Run	ON/OFF
01.Dimming	000-255
02.Strobe	000-255
03.Color	000-255
04.Water effect wheel 1	000-255
05.Water effect wheel 2	000-255
--EXIT--	

2) "Manual"

MANUAL	
01.Dimmer	000-255
02.Strobe	000-255
03.Color	000-255
04.Water effect wheel 1	000-255
05.Water effect wheel 2	000-255
06.Reset	000-255
--EXIT--	

3) "INFORMATION"

INFORMATION	
Time Info	Total User 00018:40
System Warning	No Error...
Hall State	1101100
Authority Hours	9999
--EXIT--	

4) "ADVANCE"

ADVANCE	
Color	<u>+000</u>
Power	255
--EXIT--	

3. DMX CHANNEL

CHANNEL	VALUE	FUNCTION
1	000-255	DIMMER 0%~100%
2	001-005 006-255	STROBE OFF Strobe: Slow → Fast
3	000-139 140-196 197-255	COLORS WHEEL Color-1 to Color-7 Colors change forward (fast to slow) Colors change reverse (slow to fast)
4	000-255	WATER EFFECT WHEEL 1 0%~100%
5	000-255	WATER EFFECT WHEEL 2 0%~100%
6	000-255	RESET 0%~100%

4. SPECIFICATIONS

LIGHT SOURCE	LEDs	1 * 400W WHITE LED
	LED lifespan	OSRAM brand, 7500K 50000 hours
OPTIC	Beam Angle	30°/45°/60° (Optional)
ELETRICAL	Voltage	AC100-240V, 50-60Hz
	Power Max	450W
CONTROL	Control Mode	DMX512, Auto, Sound, Scene
	DMX Channel	6-CH
EFFECTS	Colors wheel	7 Colors
	Effect wheel	2 Water Effect Wheels
PHYSICAL	Power Connection	Waterproof Cables Power in
	DMX Connection	Waterproof Cables 3-Pin DMX in/out
	Net Weight	12.0 KGs
	Dimension	335.9 * 258 * 330 mm