

Digital display Operation

UP----Heating up, the machine need to warm up when turn on.

Running circle lines----Keep on heating, not 100% heating ready, but can work at this condition, just spray time shorter.

Static circle lines----standby mode, 100% finish heating, can spray longest time.

1) MENU---Short press it to set menu data below, ENTER to confirm.

Menu	Value	Function
A001	1-512	DMX address setting
P100	1-100	Fog output volume
E000	1-9	LED color selection when manual fogging
I010	1-900	Fog timing mode interval time setting
0010	1-900	Fog timing mode duration time setting

MENU---Long press it to set menu data below, normally no need to change, long press menu again to exit.

Menu	Value	Function
H	323	The highest temperature, no need to set
L	240	The lowest temperature, no need to set
O	ON/OFF	No liquid protect ON/OFF
h	50/60	220V 50Hz/110V 60Hz
r	ON/OFF	Remote control ON/OFF
b	ON/OFF	Display LED background light ON/OFF
rEST	/	Default setting

2) UP---Press it to manual fogging at standby condition (UP/DOWN to +/- output volume), press ENTER to exit, or change value when set menu data.

3) DOWN---Short press it to enter timing working mode at standby condition(UP/DOWN to +/- output volume, the interval time and duration time can be set in menu), press ENTER to exit, or change value when set menu data.

4) ENTER--Confirm or exit

User Manual

24LED Up Spray Fog Machine



Please read this manual carefully before operation

Attention: Please obey all notices about operation. Safety and repair to avoid getting an electric shock and keep the excellent effect.

1. Keep clean.
2. Use in door.
3. The power must same as located.
4. Power off before adding fog liquid.
5. Power off or pull out plug after use.
6. Non waterproof, if there are some humidity, water or fog liquid in it, please switch off power and contact distributor as soon as possible.
7. There are no spare parts with machine. If you need to repair it, please contact distributor or professional repair works.

Avoid fire:

1. Only for adults operate. Equip it over the touch of children and pay more attention during operation.
2. Don't spray it to people directly and far away fire.
3. The temperature of smoke is very high so that keep the space between machine and other material things more than 100cm.(surface temperature of machine is 40-80℃, don't touch)
4. Put the machine at a drafty place and don't cover the cool holes to keep the best cool effect. Keep the space between the smoke machine and around things more than 20cm and between smoke machine and tinder more than 20cm. And without easily burnt things within 300cm (far away carpet, board & inflammable) .

Avoid explode:

1. Don't add tinder liquid such as oil, gas, perfume and etc. in fog machine.
2. Pay more attention to all notices sign and operation instructions on all machines.
3. Please use the high quality fog liquid recommended by distributors. Bad quality fog liquid may get blast or spray oil.
4. Often check whether there has enough fog liquid.
5. Get out all fog liquid before transport or post.
6. Don't eat fog liquid otherwise to see the doctor immediately. Use clean water to wash skin and eyes once fog liquid touches them.

Remove package and check:

1. Open carton to check whether all necessary accessories are included accord the specification list. Please contact distributor if there are something missed.
2. Check the appearance of machine and power line to see whether they have some obvious damage. Please contact distributor once you find something and stop to use fog machine.

Installation:

1. Take away all pack material especially the spray mouth.
2. Set in the horizontal direction and open the cover of liquid can.
3. Add high quality fog liquid in the machine and screw the cover of liquid can. Bad quality fog liquid will damage fog machine
4. If use up side down, please take out the liquid can and fix it on the opposite, ask distributor to offer video if don't know how to fix it.

DMX Control:

CH	Function	Value	Description
1	Fogging	0-255	0-100% spray the fog
2	Dimming	0-255	Total dimming
3	LED Red	0-255	LED red dimming
4	LED Green	0-255	LED green dimming
5	LED Blue	0-255	LED blue dimming
6	LED Strobe	0-255	LED strobe from slow to fast, work together with CH2-CH5.
7	LED change	0-255	LED color gradual change, from slow to fast.

The machine has DMX priority function, other functions invalid when there is DMX in.

Wireless remote control:

1. Press FOG mutton, the machine spray the fog.
2. Press "R" button, red LED light and spray the fog.
3. Press "G" button, green LED light and spray the fog.
4. Press "B" button, blue LED light and spray the fog.