

40W Retro Light



User Manual

Note: This manual contains important information on how to install and use the product safely. Please read it carefully and install and operate it as required. Also, please keep this manual in a safe place for future reference.

1 Product Declaration

First of all, thank you for your trust in and purchase of our products.

This product is in good condition and packed completely when it leaves the factory. In order to use this lamp better and more safely, please read this instruction manual carefully before using it and operate it according to the regulations to avoid misuse and cause unsafe factors and damage to the lamp. The dealer is not responsible for any failures and problems caused by not following the instruction manual. In addition, if there are any technical changes in the manual, we will not notify you separately.

2 Precautions

1. Please have professionals install and debug the lamps. Non-professionals are strictly prohibited from dismantling

the lamps privately.

2. Please turn off the power supply when the lamp is not in use or is being cleaned.
3. Do not use in a humid environment and keep at least 0.5 meters away from flammable materials.
4. Do not look directly at the light from the lamp with your naked eyes, otherwise it may cause damage to your eyes.
5. Please do not change the internal circuit structure of the lamp without permission, otherwise it may cause the lamp to short circuit and burn out.

3 Technical Parameters

Input Voltage: 100-240V AC, 50-60HZ

Rated Power: 40W

Operation Mode: Manual/DMX 512 Control/Wireless

Channel: 1CH

Light Source: Tungsten Bulb

Base: E27

Color: Warm Tungsten Glow

Mounting Points: M8 Mounting For Clamp

Shell Material: Metal+Aluminum

Protection Level: IP20

Size: 53*14.5*49CM

N.W: 4KG

Carton Size: 56*53*22CM

G.W: 5.3 KG

2IN1 Carton Size: 58*55*46CM

2IN1 Carton G.W: 11.6KG

4IN1 Flight Case Size: 83*63*80CM

4IN1 Flight Case G.W: 49KG

Product Advantages: This vintage-style piece, featuring a classic brushed aluminum finish, will bring a warm and visually striking element to your events and scenes

1 Display Screen Control Instructions

After powering on, press MANU to enter the main menu, press UP or DOWN to select a menu, and then press ENTER to confirm.



2 Menu Control Instructions

Interface	Function	Remark
D001	Modify Address Code D001- D512	D001 - D512
		Press the OK button to confirm (press and hold for 5 seconds to enter the background and set various parameters)
CH01	CH01	
1.000	1.000-1.255	0-100% dimming, manual adjustment of brightness
ON	ON-OFF	Restore factory settings
		OFF is the default value. ON is effective, press the OK key

3 Channel Control Description

Aisle	Numeric	Function
CH01	0-255	0-100% dimming, adjustment of brightness

4 General Maintenance

The Following Points Have To Be Considered During The Inspection:

- 1.All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2.There must not be any deformations on the housing, fixations and installation spots (ceiling, suspension, trussing).
- 3.Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4.The electric power supply cables must not show any damage, material fatigue or sediments.

Warning Message:

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION!

Disconnect from mains before starting maintenance operation.