Microfire LLC Mod-pH Datasheet

Release Information

Copyright © 2021 Microfire LLC

This documentation is licensed under a Creative Commons Attribution-NoDerivatives 4.0 International (CC BY-ND).

Release History

Release	Date	Description
1.1.0	8/13/2021	Added additional reflow procedures.
1.0.0	4/23/2021	Initial

Legal Disclaimer

TECHNICAL AND RELIABILITY DATA FOR MICROFIRE LLC PRODUCTS (INCLUDING DATASHEETS) AS MODIFIED FROM TIME TO TIME (“RESOURCES”) ARE PROVIDED BY MICROFIRE LLC "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IN NO EVENT SHALL MICROFIRE LLC BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING

NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THE RESOURCES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

MICROFIRE LLC reserves the right to make any enhancements, improvements, corrections or any other modifications to the RESOURCES or any products described in them at any time and without further notice.

The RESOURCES are intended for skilled users with suitable levels of design knowledge. Users are solely responsible for their selection and use of the RESOURCES and any application of the products described in them. User agrees to indemnify and hold MICROFIRE LLC harmless against all liabilities, costs, damages or other losses arising out of their use of the RESOURCES.

HIGH RISK ACTIVITIES. MICROFIRE LLC products are not designed, manufactured or intended for use in hazardous environments requiring fail safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, weapons systems or safety-critical applications (including life support systems and other medical devices), in which the failure of the products could lead directly to death, personal injury or severe physical or environmental damage, or business loss ("High Risk Activities"). MICROFIRE LLC specifically disclaims any express or implied warranty of fitness for High Risk Activities and accepts no liability for use or inclusions of MICROFIRE LLC products in High Risk Activities.

Microfire LLC Mod-pH Datasheet
- Release Information
- Release History
- Legal Disclaimer

About the Mod-pH Module

Mechanical Specification
- Pinout
- Surface Mounting
- Operating Conditions

Electrical Specification
- Power Supply
  - Power Isolation
  - Power Consumption

Hardware Interfaces
- I²C
  - Additional Circuitry
  - I²C Address
  - I²C Write
  - I²C Read
- UART
  - Additional Circuitry
- USB Serial
  - VID/PID
  - Additional Circuitry
- 1-Wire
  - Additional Circuitry

Design Incorporation
- Power
- Ground
- Communication
- 1-Wire Temperature Sensor
- Probe Connection
- Considerations

- Unused Pins

pH Measurements
- pH Theory
- Considerations
  - Response Time
  - Interference
  - Temperature
- Calibration
  - Procedure
  - Calibration Types
  - Single Point
  - Dual Point
  - Triple Point
  - Precedence

NMEA Interface
- NMEA Physical Connection
- NMEA Sentence Structure
  - NMEA Checksum
- $PHMEA - pH Measurement
  - Request Parameters
  - Response Parameters
  - Example Requests
  - Example Responses
- $PHERR - Parser Error
  - Response Parameters
  - Example Responses
- $PHCRC - CRC Error Checking
  - Request Parameters
  - Response Parameters
  - Example Requests
  - Example Responses
- $PHTEM - 1-Wire Temperature
  - Request Parameters
  - Response Parameters
  - Example Requests

- Example Responses
- $PHINF - pH Calibration Information
  - Request Parameters
  - Example Requests
  - Example Responses
- $PHSIN - Single Point Calibration
  - Request Parameters
  - Response Parameters
  - Example Requests
  - Example Responses
- $PHLOW - Low Point Calibration
  - Request Parameters
  - Response Parameters
  - Example Requests
  - Example Responses
- $PHMID - Mid Point Calibration
  - Request Parameters
  - Response Parameters
  - Example Requests
  - Example Responses
- $PHHIG - High Point Calibration
  - Request Parameters
  - Response Parameters
  - Example Requests
  - Example Responses

I²C Interface
- Registers
  - Register Listing
- Tasks
  - Task Listing
  - MEASURE_PH_TASK - pH Measurement
    - Request Registers
    - Response Registers
  - MEASURE_TEMP_TASK - 1-Wire Temperature
    - Required Registers

- Response Registers
- CALIBRATE_LOW_TASK - Low Point Calibration
  - Required Registers
  - Response Registers
- CALIBRATE_MID_TASK - Middle Point Calibration
  - Required Registers
  - Response Registers
- CALIBRATE_HIGH_TASK - Middle Point Calibration
  - Required Registers
  - Response Registers
- CALIBRATE_SINGLE_TASK - Single Point Calibration
  - Required Registers
  - Response Registers
- I2C_TASK - I²C address change
  - Required Registers
  - Response Registers

Certificate of Compliance

- RoHS 3 Directive 2015/863/EU

Justin Decker

About the Mod-pH Module

A module for interfacing with pH probes. It has been designed to be flexible and simple to incorporate into new or existing electrical designs.

- pH range of 0.001 to 14.000 pH units
  - Accuracy ±0.002 pH units
  - Resolution 0.001 pH units
  - Temperature compensated
- Multiple hardware interfaces operating at 3.3 volts
  - I²C with software definable address
    - Default address 0x0B
    - 10kHz, 100 kHz, 400 kHz, 1 MHz and 3.4 MHz compatible
  - UART
    - NMEA formatted output
  - USB Serial
    - Same as UART
  - 1-Wire interface for DS18B20 temperature sensor
- 25 mm wide x 15 mm high x 0.8mm thick
  - Material type: FR-4 TG155
  - DIP and castellated edges
- Calibration options include:
  - Single point
  - Dual point
  - Triple point

Mechanical Specification

The Mod-pH module is a single sided 25x15 mm 0.8 mm thick PCB with dual castellated/through-hole pins around the east and west edges. It is designed to be usable as a surface mount module as well as Dual Inline Package (DIP) type format, with the 12 pins on a 2.54mm pitch grid with 0.8mm holes.

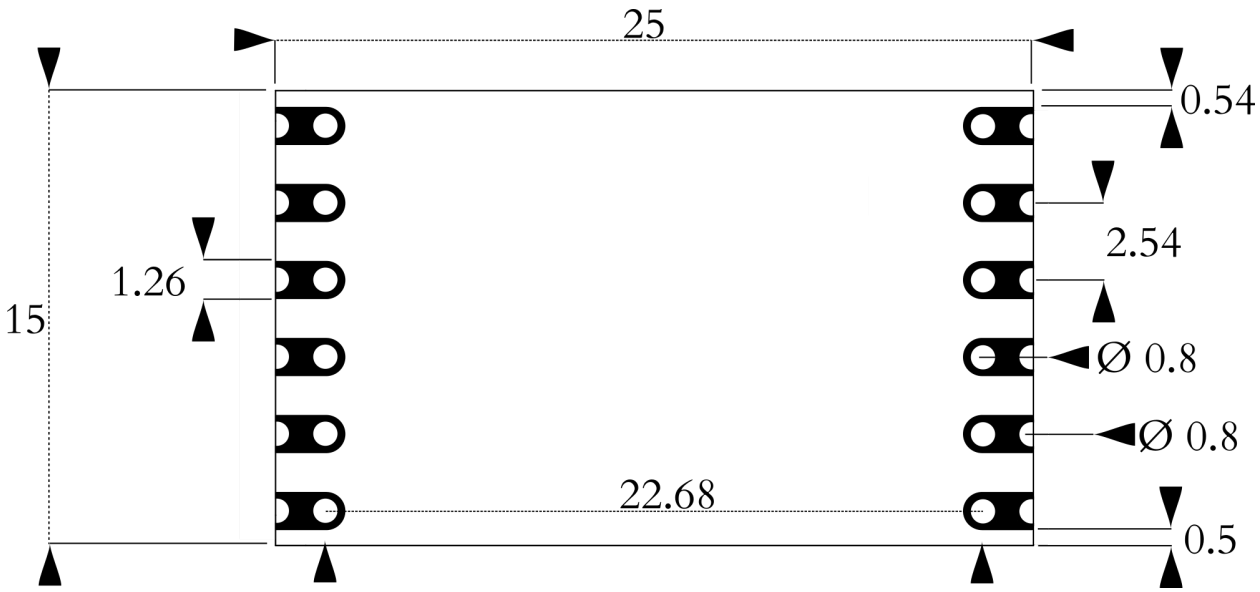


Figure 1. Physical dimensions of the module.

Pinout

The pinout of the module has been designed to provide as many interface options as possible.


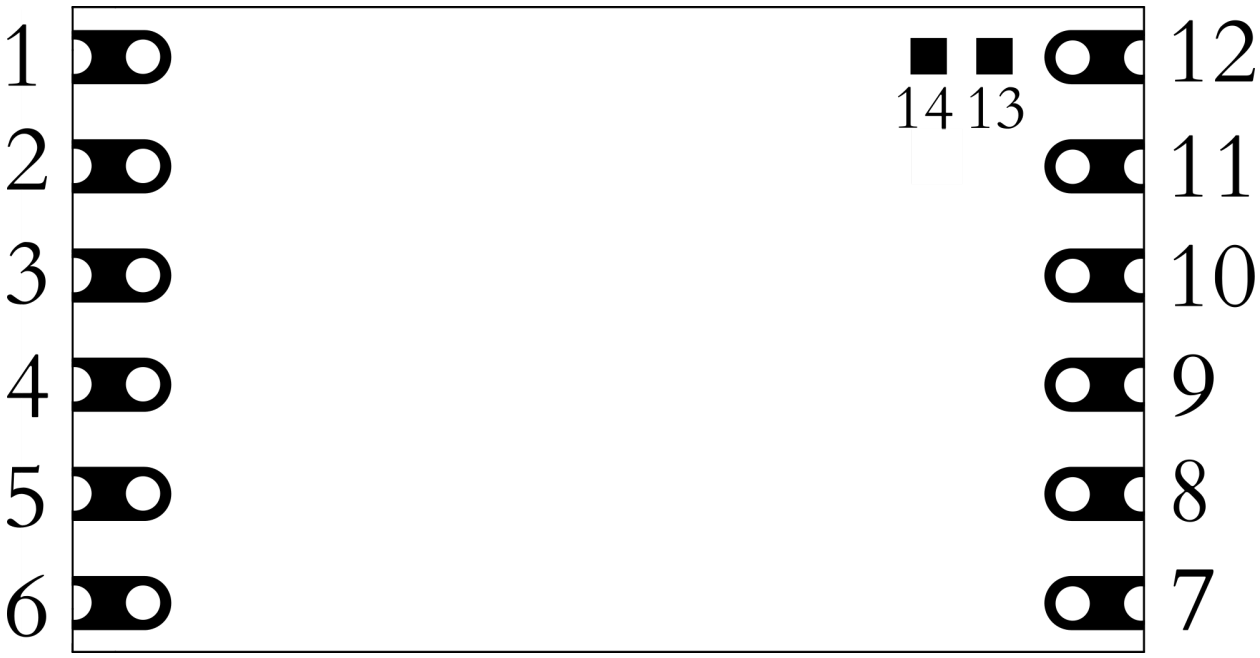


Figure 2. Pinout of the module.

Pin 1: Probe 1 input. Provides a connection to the sensing electrode of a pH probe.
Pin 2: Probe 2 input. Provides a connection to the reference electrode of a pH probe.
Pin 3: Probe 3 input. Not used in this module.
Pin 4: 1-Wire. Provides 1-Wire DS18B20 interface.
Pin 5: USB Data-. Differential data line -.
Pin 6: USB Data+. Differential data line +.
Pin 7: UART TX. transmit line for UART serial interface.
Pin 8: UART RX. receive line for UART serial interface.
Pin 9: I²C SCL. Clock line for I2C interface.
Pin 10: I²C SDA. Data line for I2C interface.
Pin 11: VIN. 3.3 volt power supply.
Pin 12: Ground. Ground for module.
Pin 13: SWD. Serial Wire Data pin. *Used to program the MCU.*
Pin 14: SWC. Serial Wire Clock pin. *Used to program the MCU.*

Surface Mounting

The following figure shows the recommended footprint for mounting the module through reflow processes. It provides for a Class 1 connection (*IPC-A-610G § 8.3.4 Castellated Terminations*).

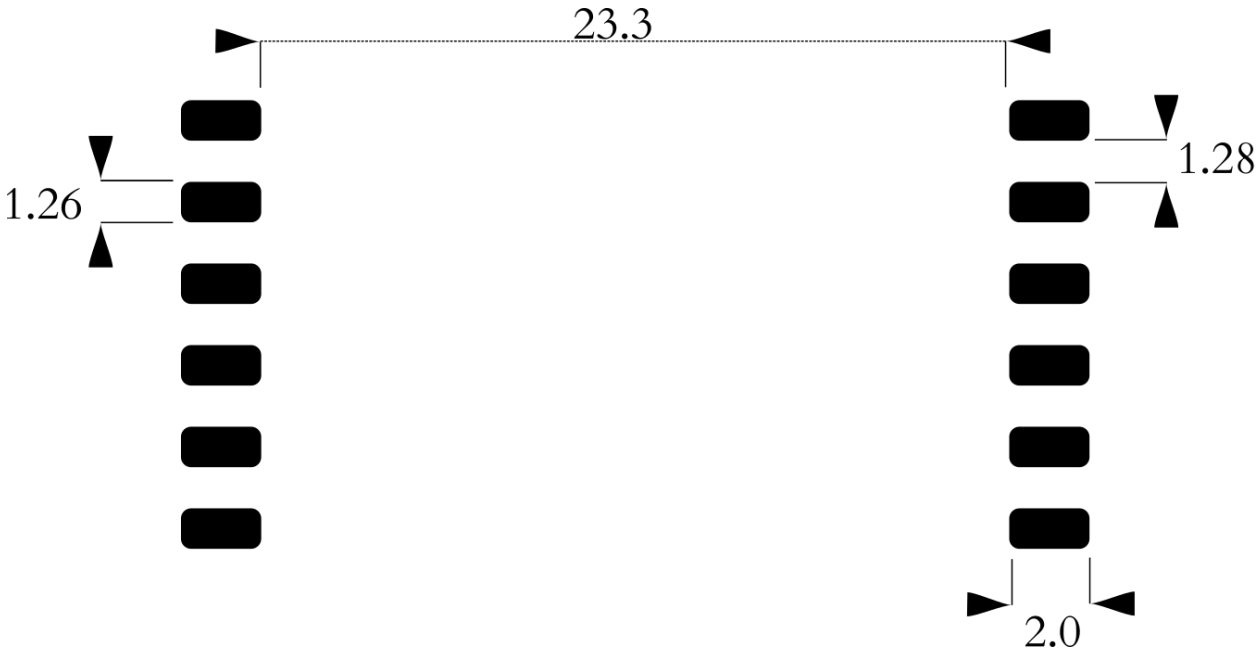

It is recommended that the stencil be 8 mil in thickness to ensure enough solder paste can flow into the castellations.

The module is assembled with Chip Quik SMD291SNL50T3 (Sn96.5/Ag3.0/Cu0.5) solder paste, a lead-free paste with a 249 degree Celsius peak reflow temperature. Reflowing the module multiple times can cause malfunction, to avoid the issue, if it is possible to use a lower melting-point temperature solder paste.

Operating Conditions

Temperature:

- **Absolute:**
  - **Maximum:** 85 C
  - **Minimum:** -40 C
- **Recommended:**
  - **Maximum:** 50 C
  - **Minimum:** 10 C

When approaching the absolute temperature ratings, it should be noted that the module's temperature will begin to affect measurements, the extent of which will need to be characterized to the specific environment the module will be deployed in.

Voltage:

- **Absolue Maximum**: 3.63 volts
- **Absolute Minimum**: 1.62 volts (3.3 volts is required for proper operation)

Electrical Specification

Power Supply

The module requires 3.3 volts for proper operation. It can be supplied with less and still communicate through the various peripheral interfaces, but this will not allow the analog circuitry to properly operate. Voltage should not exceed 3.63 volts.

There is no reverse polarity protection on the module.

Power Isolation

Due to the nature of electrochemical sensors, galvanic isolation between the probe from other parts of the circuit is needed to eliminate or reduce interference from external sources. The simplest way to achieve this is to use an isolated power supply and isolated peripheral coupler device. For example, if using I²C, a device to supply isolated power, ground, SDA and SCL lines will provide sufficient isolation.

Power Consumption

All modules are designed to be low power. Power usage has been characterized at two points, idle and active sensor measurement.

- Current use is typically 0.15 mA

Hardware Interfaces

The module provides I2C, UART, USB serial, and a limited-use 1-Wire interface. All interfaces are simultaneously available.

I²C

The module supports speeds of 10kHz, 100 kHz, 400 kHz, 1 MHz and 3.4 MHz at 3.3 volts.

The I²C interface uses the following pins:

- **Pin 9 SCL**: serial clock
- **Pin 10 SDA**: data

Additional Circuitry

The module has no pullup resistors on the I²C bus. For reliable communication, appropriate resistors must be chosen for the SDA and SCL lines.

I²C Address

The default address is 0x0B by default. It can be changed through firmware.

I²C Write

Writing is done by sending a start condition followed by the module's address with the write bit set. The master device then sends data 8 bytes at a time. The first byte received is considered to be the register address. Successive writes will automatically increment the register address by one byte. Transmission is finished with a stop condition.

I²C Read

Reading is done by sending a start condition followed by the module's address with the read bit set. The master sets the register to read from, then requests data. The device then sends the appropriate number of bytes as determined by the register being read.

UART

The UART interface uses:

- **Baud**: 9600
- **Data bits**: 8
- **Parity**: None
- **Stop bits**: 1
- **Voltage**: 3.3 volt only

These parameters are not configurable.

The UART interface uses the following pins:

- **Pin 8 RX**: receive in
- **Pin 7 TX**: transmit out

Additional Circuitry

No additional components are required for operation.

USB Serial

- Compatible with the USB 2.1 specification
- Supports full (12Mbit/s) and low (1.5Mbit/s) speed communication

The USB interface uses the following pins:

- **Pin 5 D-**: differential pair -
- **Pin 6 D+**: differential pair +

VID/PID

The module can be identified with the following information:

- **VID**: 0x04D8
- **PID**: 0xE9A5

Additional Circuitry

If the module is to be powered through USB, the voltage must be converted from 5 volts to 3.3 volts. USB D- and D+ must be routed as a differential pair.

An example of a working combination of USB connector and power regulator would be:

Molex Micro USB Connector - 47346-0001
Analog Devices ADP150 - ADP150AUJZ-3.3-R7

1-Wire

The module provides a 1-Wire interface to connect a DS18B20 temperature sensor. The interface is limited to just the DS18B20 device.

The 1-Wire interface uses the following pin:

- **Pin 4 1-Wire**: 1-Wire

Additional Circuitry

The Pin 4 1-Wire line requires a pullup resistor for reliable communication. The resistance needed is determined, in part, by the length of the cable. For a 1 to 3 meter cable, a 4.7 kOhm resistor will work.

The DS18B20 can be operated using power, ground and 1-Wire connections, or in parasitic power mode.

Design Incorporation

Adding the module is a straightforward process.

Power

A suitable power supply must be supplied. Ideal solutions will provide an isolated, low-ripple, low-EMI, 3.3 volt supply.

Ground

The module operates at the same ground potential as what **Pin 11**: Ground is connected to, so a low-impedance connection is needed.

Communication

I²C, UART or USB all have particular hardware requirements that must be planned or provided for. Refer to their Hardware Interface sections for more details. (I²C Additional Circuitry, UART Additional Circuitry and USB Additional Circuitry). It is best to choose one communication method; having the UART connected but using I²C, for example, will introduce unneeded noise to the system.

1-Wire Temperature Sensor

This connection is optional. If it is not used, **Pin 4**: 1-Wire can be left unconnected. A connector and pullup resistor are needed to connect a DS18B20 temperature sensor. Refer to the Hardware Interface section for more details.

Probe Connection

A pH probe that is compatible with the module consists of two wires. This is most commonly provided for with a BNC, SMA, or U.FL connector. While plain wires and pin terminations can be used, they may not perform as well as a properly insulated connection would.

Considerations

- **Pin 1**: Probe 1 input and **Pin 2**: Probe 2 input pins should be on their own island plane pour or otherwise isolated by no pour surrounding them.

- **Pin 1**: Probe 1 input and **Pin 2**: Probe 2 input pins should be as short as possible.
- If the PCB is 4 or more layers, consider routing **Pin 1 and Pin 2** traces on internal layers to protect the probe input signal from interference.
- Avoid routing other traces near **Pin 1** and **Pin 2**.
- Flux residue on **Pin 1, Pin 2** and at the probe connection must be removed. This is ideally accomplished by using a "no-clean" solder paste, and/or through mechanical means such as an ultrasonic bath.

Unused Pins

Any unused pins should be left unconnected to any other trace or net.

pH Measurements

pH Theory

A basic definition of pH is the inverse logarithm of the concentration of hydrogen ions in a solution.

One way hydrogen ions can be introduced is by the dissociation of water molecules. This process is called autoionization. In pure water, the concentration of hydrogen ions produced by dissociation is 1×10^{-7} M (moles per liter of water) which equals a pH of 7. A change in hydrogen ions can also be caused by introducing a substance to the water. If the substance increases hydrogen ions, it is considered an acid. If it decreases hydrogen ions, it is a base.

Hydrogen ion concentration is measured in pH units. Being logarithmic, a pH 5 liquid is 10 times more acidic than a liquid at pH 6.

As an aside, what pH stands for is debatable. Søren Peter Lauritz Sørensen, who first described and wrote about it, never explained where the `p` that he wrote came from. Others have assumed that it might be `power` or `potential` of Hydrogen, but this isn't reflected in any of Sørensen's work.

Considerations

Measuring pH is relatively straightforward, but it is important to keep some things in mind.

Response Time

pH probes are electro-chemical devices. They don't react instantly like a purely electrical device would. The probes need some time to reach an equilibrium. This is especially true when calibrating, since it moves the probe through a very wide range of values. To reach a stable measurement when moving from 4.0 pH to 7.0 pH or 7.0 pH to 10.0 pH, it may take several minutes.

Interference

A pH probe outputs a very weak signal in the millivolt range; the entire range is approximately -400 to 400 milli-Volts. This signal is then carried through the wire of the probe where it is measured. This leaves a lot of opportunities for the signal to experience interference. Other probes, faulty electrical equipment, poor grounding, strong sources of EMI, and any number of other sources may contribute to a faulty reading. Isolation can help with some sources, but not all of them.

Temperature

The temperature of a solution affects the pH. For example, a solution at 25°C may measure 6.5 pH, and the same solution at 20°C may be 6.45 pH. Part of the difference is the actual change in pH of the solution and not an error. A much smaller part of the change is due to a change in resistance of the probe and is accounted for with a temperature compensation formula.

The module uses several points of data for taking measurements and calibration. With all the points together, it applies a temperature compensation formula that adjusts the measured value to a compensated value. It is good practice to notate in some way that pH measurements have been temperature compensated for comparisons to other measurements. It is important to note that pH measurements from other devices may use different compensation formulas, or no formula at all.

Calibration

Calibration is needed to obtain accurate measurements. Each module is very slightly different from the next and each pH probe will have a slightly different response from another. For these reasons, neither modules or probes are interchangeable without both being calibrated together. Also, pH probes gradually degrade, requiring recalibration to maintain accuracy.

Procedure

Following good lab procedures is important to obtain the best results while also staying safe. pH measurements typically involve calibration solutions which are generally all toxic or hazardous to some extent. Aside from safety considerations, the following is a step-by-step process calibration:

1. Collect all the materials needed: calibration solutions, clean water, towels, equipment, etc.
2. Rinse the probe in clean water. RO/DI, deionised, or distilled water is best. Tap off excess water drops trapped in the probe tip and blot dry.
3. Pour some calibration solution into a separate container. It should be enough to fully submerge the tip of the probe, then submerge the probe.
4. Continually take measurements, watching for the measurement to stabilize. Eventually, only the third decimal place will vary from measurement to measurement. When the reading stabilizes, have the module calibrate itself for the solution.
5. Safely dispose of the calibration solution and clean or dispose of the container.
6. Repeat steps 2 through 5 for each calibration point.

It is important to note that pH solutions change slightly with temperature. The internal calculations in the module account for this when given the solution's temperature. When calibrating, use the labeled pH value, not the temperature adjusted value.

Calibration Types

The module supports three methods of calibration.

Single Point

Single point is the least useful and should generally not be used. It uses one point and is only accurate for a small range around that one point.

If this method is used, it should not be used at 7.0 pH. The reason is the pH scale is not a straight linear line all the way through the entire range. It is generally linear through 4.0 to 7.0 pH, and separately linear through 7.0 to 10.0 pH. The differing slopes will skew readings near the 7.0 pH point.

Dual Point

Dual point calibration is used for measuring between two set points. For pH measurements, the two points are typically 10. pH to 7.0 pH, or 7.0 pH to 4.0 pH. This type of calibration will provide accurate measurements between the two points, and less accurate results outside of the points.

Triple Point

With three points of calibration at 4.0, 7.0, and 10.0, nearly the entire pH range can be accurately measured. Towards the extremes of the pH scale, there is significant non-linearity and they must be calibrated more closely to the expected range (10.0 to 14.0, for example).

Precedence

The module will select the best calibration type from the available calibrated points as follows:

1. If there are high, mid, and low points, it will use triple-point calibration to calculate the result.
2. If there are high and low points, it will use dual-point calibration to calculate the result.
3. If there is a single point calibration data, it will use single-point calibration to calculate the results.
4. No calibration points used will result in an uncalibrated measurement.

NMEA Interface

The NMEA interface provides a human-readable text interface for interacting with the device. It is also easily machine parsed for automating tasks. All functions and data can be accessed through this interface.

NMEA Physical Connection

The NMEA interface can be accessed by connecting to the UART interface using:

- **Baud**: 9600
- **Data bits**: 8
- **Parity**: None
- **Stop bits**: 1

It is also available on the USB serial output.
Note: *Output is sent to both UART and USB Serial interfaces, regardless of which interface the command was received from.*

Once connected, the module will wait for input with a maximum of 10 ms between characters. If characters are spaced more than 10 ms apart, the module will emit a parser error and the command will not be accepted.

NMEA Sentence Structure

The modules comply with the original NMEA standard closely. A sentence consists of the following elements:

ELEMENT	DESCRIPTION
$	Always begins a sentence
TYPE	Sentence type
,	Delimiter
ARGUMENT	Arguments of any type. Spaces are allowed
,	*Delimiter if another argument follows*

*	Sentence end
00	A two digit checksum, represented in hexadecimal format.

Some examples of valid sentences;
$PHMEA,25.0,0*78
$ECMEA,22.1,0.019,25.0,1.0*40

Invalid sentences:
PHMEA,25.0,0*78 - No starting **$**
$ECMEA 22.1,0.019,25.0,1.0*40 - Space between type and arguments

NMEA Checksum

By default, the module will accept invalid checksums. Rather than passing an NMEA sentence with the correct checksum, a 00 can be sent (*$TYPE**00). This behavior can be changed with PHCRC, turning checking on or off. This setting is not saved through a power reset cycle.

The checksum is calculated for all characters between, and not including, the starting **$** and just before the ending *. It is calculated by XORing each character with the next.

An example function in C/C++:

```
int nmea_checksum(const char *s){
  int c = 0;
  while (*s)
  {
    c ^= *s++;
  }
  return c;
}
```

Source: Wikipedia

$PHMEA - pH Measurement

Starts a pH measurement. It takes 750 ms to complete a measurement.

Request Parameters

Parameter	Description
TEMP_C	The solution-under-test's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Parameters

Parameter	Description
pH	The solution-under-test's pH. Formatted as a floating point number with 3 decimal places.
mV	The solution-under-test's mV. Formatted as a floating point number with up to 3 decimal places. Represents the raw, unmodified mV value from the attached probe.
STATUS	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

Example Requests

$PHMEA,22.150*67 - a pH measurement using 22.150 as the solution's temperature.

Example Responses

$PHMEA,7.451,-24.445,0*54 – pH value measured as 7.451 without error

$PHERR - Parser Error

Unsolicited response to an NMEA parse error.

Response Parameters

Parameter	Description
ERROR	NMEA parse error. Can be one of the following: **1**: Unexpected character encountered **2**: Sentence buffer full **3**: Sentence type longer than 5 **4**: CRC error **5**: System error

Example Responses

$PHERR,1*40 - An unexpected character was encountered.

$PHCRC - CRC Error Checking

Turns NMEA sentence CRC checking on or off and retrieves the current status.

Request Parameters

Parameter	Description
0	Turns CRC checking off
1	Turns CRC checking on

Response Parameters

Parameter	Description
CRC	Returns: **0**: if CRC checking is turned off **1**: CRC checking is on

Example Requests

$PHCRC*4A – Gets the status of CRC checking.
$PHCRC,0*56 - Turns CRC checking off.
$PHCRC,1*57 - Turns CRC checking on.

Example Responses

$PHCRC,1*5C - CRC checking is on.
$PHCRC,0*5D - CRC checking off.

$PHTEM - 1-Wire Temperature

Starts a temperature measurement with the optionally attached DS18B20 sensor. The module provides a basic interface to the sensor. It is initialized with 12-bit precision and is not changeable. It takes 750 ms to complete a measurement.

Request Parameters

Parameter	Description
None	

Response Parameters

Parameter	Description
TEMP_C	Temperature in Celsius. Formatted as a floating point number with 3 decimal places.
TEMP_F	Temperature in Fahrenheit. Formatted as a floating point number with 3 decimal places.
STATUS	An error code for the measurement. Can be one of the following: **0**: No error **3**: System error

Example Requests

$PHTEM*44 - Starts a temperature measurement.

Example Responses

$PHTEM,19.688,67.438,0*58 - A temperature response without errors.
$PHTEM,-127,-127,3*5B - A temperature response with no sensor connected.

$PHINF - pH Calibration Information

Requests or sets pH calibration and other system information. To get information, the sentence can be called without parameters.

To set any parameter, either an actual value, or a default value of **-9999** can be used. If **-9999** is passed, the parameter is ignored. All parameters must be filled with an actual value or **-9999**.

To set the default value, pass `**nan**`. Internally, the module distinguishes between calibration data, which can be a large range of numbers, by using a *Not A Number* placeholder.

Request Parameters

Parameter	Description
REFERENCE_LOW	The reference-low calibration point, the point the device should measure.
READ_LOW	The read-low calibration point, the point the device measures at the REFERENCE_LOW point.
REFERENCE_MIDDLE	The reference-middle calibration point, the point the device should measure.
READ_MIDDLE	The read-low calibration point, the point the device measures at the REFERENCE_LOW point.
REFERENCE_HIGH	The reference-high calibration point, the point the device should measure.
READ_HIGH	The read-high calibration point, the point the device measures at the REFERENCE_HIGH point.
SINGLE_OFFSET	Single point calibration data.

CALIBRATION_TEMP_C	The temperature in Celsius calibration was performed at. Used in temperature compensation.
I2C_ADDRESS	The I²C address of the module. The default value for this is 0x0B (11 decimal).
HARDWARE_VESION	The hardware version of the module.
FIRMWARE_VERSION	The firmware version on the module.

Example Requests

$PHINF*59 – Retrieves pH calibration and system information.
$PHINF,4.0,4.1,-9999,-9999,-9999,-9999,-9999,-9999,-9999*59 - Sets low read and reference data only.
$PHINF,nan,nan,nan,nan,nan,nan,nan,nan,11*75 - Resets all values to system default.

Example Responses

$PHINF,177.480,176.520,0.000,-0.061,-177.480,-141.080,nan,19.600,11,1,1*25 - Full listing of calibration and system information.

$PHSIN - Single Point Calibration

Performs a single-point calibration. It takes 750 ms to complete a measurement.

Note: When passing the calibration solution's value, use the temperature compensated value.

Request Parameters

Parameter	Description
CALIBRATION_PH	The pH of the calibration solution.
TEMP_C	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Parameters

Parameter	Description
SINGLE_POINT_OFFSET	The calibration data of the single-point calibration.
STATUS	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

Example Requests

$PHSIN,4.0,25.0*7F - performs single-point calibration at 4.0 pH and the solution being 25.0 Celsius.

Example Responses

$PHSIN,-59.045,0*42 - the result of the calibration with no errors.

$PHLOW - Low Point Calibration

Performs a low-point calibration. It takes 750 ms to complete a measurement.

Note: When passing the calibration solution's value, use the temperature compensated value.

Request Parameters

Parameter	Description
CALIBRATION_PH	The pH of the calibration solution.
TEMP_C	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Parameters

Parameter	Description
LOW_POINT_REFERENCE	The reference-low calibration point, the point the device should measure.
LOW_POINT_READING	The read-low calibration point, the point the device measures at the LOW_POINT_REFERENCE point.
STATUS	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

Example Requests

$PHLOW,4.0,25.0*7F - performs low-point calibration at 4.0 pH and the solution being 25.0 Celsius.

Example Responses

$PHLOW,177.480,176.563,0*5D – the result of the calibration with no errors.

$PHMID - Mid Point Calibration

Performs a middle-point calibration. It takes 750 ms to complete a measurement.

Note: When passing the calibration solution's value, use the temperature compensated value.

Request Parameters

Parameter	Description
CALIBRATION_PH	The pH of the calibration solution.
TEMP_C	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Parameters

Parameter	Description
MIDDLE_POINT_REFERENCE	The reference-middle calibration point, the point the device should measure.
MIDDLE_POINT_READING	The read-middle calibration point, the point the device measures at the MID_POINT_REFERENCE point.
STATUS	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

Example Requests

$PHMID,7.0,25.0*68 - performs middle-point calibration at 7.0 pH and the solution being 25.0 Celsius.

Example Responses

$PHMID,0.000,-0.696,0*60 - the result of the calibration with no errors.

$PHHIG - High Point Calibration

Performs a high-point calibration. It takes 750 ms to complete a measurement.

Note: When passing the calibration solution's value, use the temperature compensated value.

Request Parameters

Parameter	Description
CALIBRATION_PH	The pH of the calibration solution.
TEMP_C	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Parameters

Parameter	Description
HIGH_POINT_REFERENCE	The reference-high calibration point, the point the device should measure.
HIGH_POINT_READING	The read-high calibration point, the point the device measures at the HIGH_POINT_REFERENCE point.
STATUS	An error code for the measurement. Can be one of the following: **0**: no error

	1: outside lower range **2**: outside upper range **3**: system error

Example Requests

$PHHIG,10.0,25.0*58 - performs high-point calibration at 10.0 pH and the solution being 25.0 Celsius.

Example Responses

$PHHIG,-177.480,-141.080,0*43 - the result of the calibration with no errors.

I²C Interface

The module's I²C interface operates similarly to many common I²C sensors. There are several registers which hold values such as calibration, pH and temperature, or version information. The registers are used to pass information both to the module and the controlling device. Tasks are performed by writing a specified value to a certain register.

Registers

All registers are either 1 byte or a float which is 4 bytes formatted as an IEEE 754 32 bit floating point, little-endian. The firmware will allow the registers to be read and written.

Register Listing

Register Name	Value	Type	Description
HW_VERSION_REGISTER	0	byte	To initiate tasks
FW_VERSION_REGISTER	1	byte	Hardware version
TASK_REGISTER	2	byte	Firmware version
STATUS_REGISTER	3	byte	Status of measurement
PH_REGISTER	4	float	Measured pH
TEMP_C_REGISTER	8	float	Measured temperature in Celsius

MV_REGISTER	12	float	mV value from the probe
CALIBRATE_REFLOW_REGISTER	16	float	Reference-low calibration data
CALIBRATE_READLOW_REGISTER	20	float	Read-low calibration data
CALIBRATE_REFMID_REGISTER	24	float	Reference-mid calibration data
CALIBRATE_READMID_REGISTER	28	float	Read-mid calibration data
CALIBRATE_REFHIGH_REGISTER	32	float	Reference-high calibration data
CALIBRATE_READHIGH_REGISTER	36	float	Read-high calibration data
CALIBRATE_SINGLE_OFFSET_REGISTER	40	float	Single-offset calibration data
CALIBRATE_TEMPERATURE_REGISTER	44	float	Calibration temperature data

All the CALIBRATE_* registers are automatically saved when written.

Tasks

When a particular value is written to TASK_REGISTER, it starts an operation within the module.

For example, when MEASURE_PH_TASK is written to the TASK_REGISTER register, a pH measurement is performed. To read the resulting measurement, you would read the PH_REGISTER register.

Task Listing

Task Name	Duration	Value	Description
MEASURE_PH_TASK	750 ms	80	pH measurement
MEASURE_TEMP_TASK	750 ms	40	Temperature measurement
CALIBRATE_LOW_TASK	750 ms	20	Low-point calibration
CALIBRATE_MID_TASK	750 ms	10	Mid-point calibration
CALIBRATE_HIGH_TASK	750 ms	8	High-point calibration
CALIBRATE_SINGLE_TASK	750 ms	4	Single-point calibration

I2C_TASK	1 ms	2	I²C address change

MEASURE_PH_TASK - pH Measurement

Starts a pH measurement.

Request Registers

Register	Description
TEMP_C_REGISTER	The solution-under-test's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Registers

Register	Description
PH_REGISTER	Value of pH measurement
STATUS_REGISTER	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

MEASURE_TEMP_TASK - 1-Wire Temperature

Starts a temperature measurement with the optionally attached DS18B20 sensor. The module provides a basic interface to the sensor. It is initialized with 12-bit precision and is not changeable. It takes 750 ms to complete a measurement.

Required Registers

Register	Description
None	

Response Registers

Register	Description
TEMP_C_REGISTER	Value of temperature measurement
STATUS_REGISTER	An error code for the measurement. Can be one of the following: **0**: no error **3**: system error

CALIBRATE_LOW_TASK - Low Point Calibration

Performs a low-point calibration.

Note: When passing the calibration solution's value, use the temperature compensated value.

Required Registers

Register	Description
PH_REGISTER	The pH of the calibration solution.
TEMP_C_REGISTER	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Registers

Register	Description
CALIBRATE_REFLOW_REGISTER	Reference-low calibration data
CALIBRATE_READLOW_REGISTER	Read-low calibration data
STATUS_REGISTER	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

CALIBRATE_MID_TASK - Middle Point Calibration

Performs a mid-point calibration.

Note: When passing the calibration solution's value, use the temperature compensated value.

Required Registers

Register	Description
PH_REGISTER	The pH of the calibration solution.
TEMP_C_REGISTER	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Registers

Register	Description
CALIBRATE_REFMID_REGISTER	Reference-mid calibration data
CALIBRATE_READMID_REGISTER	Read-mid calibration data
STATUS_REGISTER	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

CALIBRATE_HIGH_TASK - Middle Point Calibration

Performs a high-point calibration.

Note: When passing the calibration solution's value, use the temperature compensated value.

Required Registers

Register	Description
PH_REGISTER	The pH of the calibration solution.
TEMP_C_REGISTER	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Registers

Register	Description
CALIBRATE_REFHIGH_REGISTER	Reference-high calibration data
CALIBRATE_READHIGH_REGISTER	Read-high calibration data
STATUS_REGISTER	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

CALIBRATE_SINGLE_TASK - Single Point Calibration

Performs a single-point calibration.

Note: When passing the calibration solution's value, use the temperature compensated value.

Required Registers

Register	Description
PH_REGISTER	The pH of the calibration solution.
TEMP_C_REGISTER	The calibration solution's temperature in Celsius. If the temperature is unknown, pass 25.0

Response Registers

Register	Description
CALIBRATE_SINGLE_OFFSET_REGISTER	Single-offset calibration data
STATUS_REGISTER	An error code for the measurement. Can be one of the following: **0**: no error **1**: outside lower range **2**: outside upper range **3**: system error

I2C_TASK - I²C address change

Changes the device's I²C address.

Required Registers

Register	Description
PH_REGISTER	Used to temporarily store the new I²C address.

Response Registers

Register	Description
None	

Microfire LLC

Justin Decker, CEO
61190 Deronda Ave
Whitewater, CA 92282
https://ufire.co
justin@ufire.co

17 May 2021

Certificate of Compliance

RoHS 3 Directive 2015/863/EU

Microfire LLC certifies to the best of its knowledge and belief, that the products listed herein conform with RoHS 3 Directive 2015/863/EU and its subsequent amendments. This declaration further certifies that Microfire LLC has obtained RoHS Certificates of Compliance from each applicable supplier of materials and parts used in the assembly and manufacture of these goods.

Modules
Mod-EC
Mod-pH
Mod-ORP
Mod-ISO_I2C_UART
Mod-Temp

Development Boards
Isolated Dev Board
Mod-EVAL
Mod-EVAL_ISO

Probes
Industrial pH Probe
Industrial EC Probe
Industrial ORP Probe
Lab pH Probe
Lab EC Probe
Lab ORP Probe



Justin Decker