



BLUE SEA LIGHTING

User Manual

Please read the instruction carefully before use



BSMLO1400

IP1400 Super strobe

TABLE OF CONTENTS

1. Technical Parameter	1
2. Package Contents	2
3. Menu	3
4. DMX Channel	6
5. Photometric Diagram	37
6. Production Size	37

STATEMENT

The product has well capability and intact packing when leave factory. All of the user should comply with warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

1. Technical Parameter

Input voltage: AC100–240V 50/60Hz

Power: 1400W

Light source: 784 × 0.5W RGB LEDs, 392 × 3W white LEDs

Lamp lifespan: 50,000 hours

Color: Red, green, blue, white with infinite color mixing

LED control: RGB 14 segments control, white 28 segments control

Y-axis: 220° (16-bit precision scanning)

Y-axis driven by high-speed silent three-phase motor, ensuring fast and smooth movement, automatic reset after misoperation, adjustable speed, with rotation and reverse functions, high-precision optical electromagnetic positioning

Strobe: 0.3–25 times/second electronic strobe

Dimmer: 0–100% linear dimming with gamma correction, frequency adjustable from 1.2K to 25K, flicker-free, suitable for video shooting, stable constant current driver

Control mode: 24CH (simplified), 8/11/13/24/30/74/97CH (standard)

Protocol: DMX512, RDM, Art-Net

Power connection: Power in/out, max link 2 units @230V, 1 unit @120V

Signal connection: DMX512 input/output, max 30 units (3-pin)

Display: LCD touch screen, bilingual menu, sensor fault and temperature display

Cooling system: High-efficiency aluminum heat sink, intelligent fan control, automatic speed adjustment, built-in overheat protection and noise balance system

IP rating: IP65

Net weight: 15 kg

Product size: 404 × 202 × 350 mm

2. Package Contents

1× IP Waterproof 1400w Wash Moving LED Strobe Light

1×AC power cord

1×User's manual

1× 3-pin Signal cord

3. Menu

Serial Number	First level menu	Secondary Menu	
1	Protocol	DMX512	
2	DMX Address	001-512	
3	DMX Channel	8CH	
		11CH	
		13CH	
		24CH	
		30CH	
		74CH	
		97CH	
4	DMX State	Standby	
		Keep	
5	NetWork	IP Address	000.000.000.000
		Subnet MASK	000.000.000.000
		ArtNet	Net 001-128
			SubNet 00-15
			UNIVERSE 00-15
			Prot Address 0-32767
		SACN	区域 0-63999
6	Static	Fixed Color	R
			G
			B
			GB
			RB
			RG
			RGB
			OFF
		Manual Color	R 000-255
			G 000-255
			B 000-255
7	Plate FX	Effect 00-26	
		Speed 000-100	
		Intensity 000-255	
		Background R	

Serial Number	First level menu	Secondary Menu	
			G
			B
			GB
			RB
			RG
			RGB
			OFF
		Foreground	R
			G
			B
			GB
			RB
			RG
			RGB
			OFF
8	Beam Intensity	000-255	
9	Flash Duration	000-255	
10	Flash Rate	000-255	
11	TiTt	000-255	
12	TiTt Invert	NO	
		YES	
13	Encoder	ON	
		OFF	
14	Pixel Invert	Platel Invert	NO
			YES
		Plate2 Invert	NO
			YES
		Tub1 Invert	NO
			YES
15	Led Swap	Plate Swap	NO
			YES
		Tube Swap	NO
			YES
16	Master Slave	Slave	
		Master	
17	Dimming Mode	OFF	

Serial Number	First level menu	Secondary Menu	
		Model1	
		Model2	
18	White Balance	ON/OFF	ON
			OFF
		R	000-255
		G	000-255
		B	000-255
19	Dim Fiequency	16K	
		250Hz	
20	Fan Mode	Auto	
		NO	
21	DisplayInvert	NO	
		YES	
22	Back Light	Alway	
		1Min	
		20S	
		10S	
23	Language	中	
		En	
24	Key Lock (pass: 8888)	ON	
		OFF	
25	Information	Ver xxxxxxxxx	
		Dis xxxxxxxxx	
		LED Temp	
26	Factory Reset	NO	
		YES	
27	advanced setting (Long press options 1-5 on the main menu interface to enter)	TiTt Offset	020--255
		TiTt Trip	020--255
		R Current	020--255
		G Current	020--255
		B Current	020--255
		W Current	020--255
		Total Power	050--255
		Temperature	40--80
		Push	Yes/No The host pushes to the slave to update the parameters of the slave

Serial Number	First level menu	Secondary Menu	
			Attention: The signal line between the host and the slave is connected and powered on. The slave is set to DMX512 mode. After entering this option, the host should not rush to exit. Wait for the slave light to flash to indicate that the slave update is successful. At this time, the host can exit

4. DMX Channel

DMX 512 97CHs

CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Master dimmer	000-255	0-100%
4	Plate dimmer	000-255	0-100%
5	Beam dimmer	000-255	0-100%
6	Plate flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast

		251-255	100 % On,no flash/strobe
7	Plate flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%
8	Beam flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100 % On,no flash/strobe
9	Beam flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%
10	Plate pixel 1 red	000-255	0-100%
11	Plate pixel 1 green	000-255	0-100%
12	Plate pixel 1 blue	000-255	0-100%
13	Plate pixel 2 red	000-255	0-100%
14	Plate pixel 2 green	000-255	0-100%
15	Plate pixel 2 blue	000-255	0-100%

16	Plate pixel 3 red	000-255	0-100%
17	Plate pixel 3 green	000-255	0-100%
18	Plate pixel 3 blue	000-255	0-100%
19	Plate pixel 4 red	000-255	0-100%
20	Plate pixel 4 green	000-255	0-100%
21	Plate pixel 4 blue	000-255	0-100%
22	Plate pixel 5 red	000-255	0-100%
23	Plate pixel 5 green	000-255	0-100%
24	Plate pixel 5 blue	000-255	0-100%
25	Plate pixel 6 red	000-255	0-100%
26	Plate pixel 6 green	000-255	0-100%
27	Plate pixel 6 blue	000-255	0-100%
28	Plate pixel 7 red	000-255	0-100%
29	Plate pixel 7 green	000-255	0-100%
30	Plate pixel 7 blue	000-255	0-100%
31	Plate pixel 8 red	000-255	0-100%

32	Plate pixel 8 green	000-255	0-100%
33	Plate pixel 8 blue	000-255	0-100%
34	Plate pixel 9 red	000-255	0-100%
35	Plate pixel 9 green	000-255	0-100%
36	Plate pixel 9 blue	000-255	0-100%
37	Plate pixel 10 red	000-255	0-100%
38	Plate pixel 10 green	000-255	0-100%
39	Plate pixel 10 blue	000-255	0-100%
40	Plate pixel 11 red	000-255	0-100%
41	Plate pixel 11 green	000-255	0-100%
42	Plate pixel 11 blue	000-255	0-100%
43	Plate pixel 12 red	000-255	0-100%
44	Plate pixel 12 green	000-255	0-100%
45	Plate pixel 12 blue	000-255	0-100%
46	Plate pixel 13red	000-255	0-100%
47	Plate pixel 13 green	000-255	0-100%

48	Plate pixel 13 blue	000-255	0-100%
49	Plate pixel 14 red	000-255	0-100%
50	Plate pixel 14 green	000-255	0-100%
51	Plate pixel 14 blue	000-255	0-100%
52	Beam pixel 1	000-255	0-100%
53	Beam pixel 2	000-255	0-100%
54	Beam pixel 3	000-255	0-100%
55	Beam pixel 4	000-255	0-100%
56	Beam pixel 5	000-255	0-100%
57	Beam pixel 6	000-255	0-100%
58	Beam pixel 7	000-255	0-100%
59	Beam pixel 8	000-255	0-100%
60	Beam pixel 9	000-255	0-100%
61	Beam pixel 10	000-255	0-100%
62	Beam pixel 11	000-255	0-100%
63	Beam pixel 12	000-255	0-100%

64	Beam pixel 13	000-255	0-100%
65	Beam pixel 14	000-255	0-100%
66	Beam pixel 15	000-255	0-100%
67	Beam pixel 16	000-255	0-100%
68	Beam pixel 17	000-255	0-100%
69	Beam pixel 18	000-255	0-100%
70	Beam pixel 19	000-255	0-100%
71	Beam pixel 20	000-255	0-100%
72	Beam pixel 21	000-255	0-100%
73	Beam pixel 22	000-255	0-100%
74	Beam pixel 23	000-255	0-100%
75	Beam pixel 24	000-255	0-100%
76	Beam pixel 25	000-255	0-100%
77	Beam pixel 26	000-255	0-100%
78	Beam pixel 27	000-255	0-100%
79	Beam pixel 28	000-255	0-100%

80	Beam FX	000-005	No function	
		006-042	Ramp up	
		043-085	Ramp down	
		086-128	Ramp up-down	
		129-171	Random	
		172-214	Lightning	
		215-255	Spikes	
81 82 83	Plates foreground Plate foreground dimmer Plate background	000-000	No function	
		001-002	White(2700K)	
		003-004	White(3200K)	
		005-006	White(4200K)	
		007-008	White(5600K)	
		009-010	White(8000K)	
		011	Blue	R:0 G:0 B:255 W:0
		012-048	Green+/Blue	R:0 G:0 B:255 W:0
		049	Cyan	R:0 G:255 B:255 W:0

		050-086	Green/Blue- B:-	R:0 W:0	G:255
		087	Green B:0	R:0 W:0	G:255
		088-124	Red+/Green B:0	R:+ W:0	G:255
		125	Yellow B:0	R:255 W:0	G:255
		126-162	Red/Green- B:0	R:255 W:0	G:-
		163	Red B:0	R:255 W:0	G:0
		164-200	Red/Blue+ B:+	R:255 W:0	G:0
		201	Magenta B:255	R:255 W:0	G:0
		202-238	Red-/Blue B:255	R:- W:0	G:0
		239	Blue B:255	R:0 W:0	G:0
		240-247	Color index,fast to slow		
		248-255	Color snap,fast to slow		
		000-255	0-100%		
		000-000	No function		
		001-002	White(2700K)		

		003-004	White(3200K)
		005-006	White(4200K)
		007-008	White(5600K)
		009-010	White(8000K)
		011	Blue R:0 G:0 B:255 W:0
		012-048	Green+/Blue R:0 G:+ B:255 W:0
		049	Cyan R:0 G:255 B:255 W:0
		050-086	Green/Blue- R:0 G:255 B:- W:0
		087	Green R:0 G:255 B:0 W:0
		088-124	Red+/Green R:+ G:255 B:0 W:0
		125	Yellow R:255 G:255 B:0 W:0
		126-162	Red/Green- R:255 G:- B:0 W:0
		163	Red R:255 G:0 B:0 W:0
		164-200	Red/Blue+ R:255 G:0 B:+ W:0
		201	Magenta R:255 G:0 B:255 W:0

		202-238	Red-/Blue R:- G:0 B:255 W:0
		239	Blue R:0 G:0 B:255 W:0
		240-247	Color index,fast to slow
		248-255	Color snap,fast to slow
84	Plate background dimmer	000-255	0-100%
85	Plate 1(pixels 1-7)	000-002	Plate FX All select(all on) see Plate Patterns
	FX select (see Pixel Mapping)	003-255	
86	Plate 1(pixels 1-7) FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
87	Plate 1(pixels 1-7)	000-002	Snap from cell to cell
	FX crossfade (see Pixel Mapping)	003-255	Fade duration:short to long
	Plate 2(pixels 8-14)	000-002	Plate FX All select(all on) see Plate Patterns

88	FX select (see Pixel Mapping)	003-255	
89	Plate 2(pixels 8-14) FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
90	Plate 2(pixels 8-14)	000-002	Snap from cell to cell
	FX crossfade (see Pixel Mapping)	003-255	Fade duration:short to long
91	Beam 1(pixels 1-14)	000-002	Beam FX All select(all on) see Beam Patterns
	FX select (see Pixel Mapping)	003-255	
92	Beam 1(pixels 1-14) FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function

93	Beam 1(pixels 1-14)	000-002	Snap from cell to cell Fade duration:short to long
	FX crossfade (see Pixel Mapping)	003-255	
94	Beam 2(pixels 15-28) FX select (see Pixel Mapping)	000-002	Beam FX All select(all on) see Beam Patterns
		003-255	
95	Beam 2(pixels 15-28)FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
96	Beam 2(pixels 15-28) FX crossfade (see Pixel Mapping)	000-002	Snap from cell to cell Fade duration:short to long
		003-255	
97	Control*	000-005	No function
		006-010	Off (dimmer mode)
		011-015	Dimmer 1
		016-020	Dimmer 2
		021-025	Dimmer 3

		026-030	600 Hz
		031-035	1200 Hz
		036-040	2000 Hz
		041-045	4000 Hz
		046-050	6000 Hz
		051-055	25 KHz
		056-060	Fan mode auto
		060-065	Fan mode on
		066-070	Tilt reset
		071-075	Plate 1 invert off
		076-080	Plate 1 invert on
		081-085	Plate 2 invert off
		086-090	Plate 2 invert on
		091-095	Beam 1 invert off
		096-100	Beam 1 invert on

		101-105	Beam 2 invert off
		106-110	Beam 2 invert on
		111-115	Plate swap on
		116-120	Plate swap off
		121-125	Beam swap on
		126-130	Beam swap off
		131-255	No function

DMX 512 74CHs

CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Dimmer	000-255	0-100%
4	Strobe	000-009	Open
		010-079	Strobe,slow to fast
		080-149	Pulse,slow to fast
		150-219	Random Strobe,slow to fast
		220-255	Open
5	Plate pixel 1 red	000-255	0-100%
6	Plate pixel 1 green	000-255	0-100%
7	Plate pixel 1 blue	000-255	0-100%
8	Plate pixel 2 red	000-255	0-100%
9	Plate pixel 2 green	000-255	0-100%

10	Plate pixel 2 blue	000-255	0-100%
11	Plate pixel 3 red	000-255	0-100%
12	Plate pixel 3 green	000-255	0-100%
13	Plate pixel 3 blue	000-255	0-100%
14	Plate pixel 4 red	000-255	0-100%
15	Plate pixel 4 green	000-255	0-100%
16	Plate pixel 4 blue	000-255	0-100%
17	Plate pixel 5 red	000-255	0-100%
18	Plate pixel 5 green	000-255	0-100%
19	Plate pixel 5 blue	000-255	0-100%
20	Plate pixel 6 red	000-255	0-100%
21	Plate pixel 6 green	000-255	0-100%
22	Plate pixel 6 blue	000-255	0-100%
23	Plate pixel 7 red	000-255	0-100%
24	Plate pixel 7 green	000-255	0-100%
25	Plate pixel 7 blue	000-255	0-100%
26	Plate pixel 8 red	000-255	0-100%
27	Plate pixel 8 green	000-255	0-100%
28	Plate pixel 8 blue	000-255	0-100%
29	Plate pixel 9 red	000-255	0-100%
30	Plate pixel 9 green	000-255	0-100%
31	Plate pixel 9 blue	000-255	0-100%
32	Plate pixel 10 red	000-255	0-100%
33	Plate pixel 10 green	000-255	0-100%
34	Plate pixel 10 blue	000-255	0-100%
35	Plate pixel 11 red	000-255	0-100%
36	Plate pixel 11 green	000-255	0-100%
37	Plate pixel 11 blue	000-255	0-100%
38	Plate pixel 12 red	000-255	0-100%

39	Plate pixel 12 green	000-255	0-100%
40	Plate pixel 12 blue	000-255	0-100%
41	Plate pixel 13red	000-255	0-100%
42	Plate pixel 13 green	000-255	0-100%
43	Plate pixel 13 blue	000-255	0-100%
44	Plate pixel 14 red	000-255	0-100%
45	Plate pixel 14 green	000-255	0-100%
46	Plate pixel 14 blue	000-255	0-100%
47	Beam pixel 1	000-255	0-100%
48	Beam pixel 2	000-255	0-100%
49	Beam pixel 3	000-255	0-100%
50	Beam pixel 4	000-255	0-100%
51	Beam pixel 5	000-255	0-100%
52	Beam pixel 6	000-255	0-100%
53	Beam pixel 7	000-255	0-100%
54	Beam pixel 8	000-255	0-100%
55	Beam pixel 9	000-255	0-100%
56	Beam pixel 10	000-255	0-100%
57	Beam pixel 11	000-255	0-100%
58	Beam pixel 12	000-255	0-100%
59	Beam pixel 13	000-255	0-100%
60	Beam pixel 14	000-255	0-100%
61	Beam pixel 15	000-255	0-100%
62	Beam pixel 16	000-255	0-100%
63	Beam pixel 17	000-255	0-100%
64	Beam pixel 18	000-255	0-100%
65	Beam pixel 19	000-255	0-100%
66	Beam pixel 20	000-255	0-100%
67	Beam pixel 21	000-255	0-100%

68	Beam pixel 22	000-255	0-100%
69	Beam pixel 23	000-255	0-100%
70	Beam pixel 24	000-255	0-100%
71	Beam pixel 25	000-255	0-100%
72	Beam pixel 26	000-255	0-100%
73	Beam pixel 27	000-255	0-100%
74	Beam pixel 28	000-255	0-100%

DMX 512 30CHs

CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Master dimmer	000-255	0-100%
4	Plate dimmer	000-255	0-100%
5	Beam dimmer	000-255	0-100%
6	Plate flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
7	Plate flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%
8	Beam flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
9	Beam flash rate	000-009	100%
		010-250	Slow to fast

		251-255	100%
10	Plates red	000-255	0-100%
11	Plates green	000-255	0-100%
12	Plates blue	000-255	0-100%
13	Beam FX	000-005	No function
		006-042	Ramp up
		043-085	Ramp down
		086-128	Ramp up-down
		129-171	Random
		172-214	Lightning
		215-255	Spikes
14	Plates foreground	000-000	No function
		001-002	White(2700K)
		003-004	White(3200K)
		005-006	White(4200K)
		007-008	White(5600K)
		009-010	White(8000K)
		011	Blue R:0 G:0 B:255 W:0
		012-048	Green+/Blue R:0 G:+ B:255 W:0
		049	Cyan R:0 G:255 B:255 W:0
		050-086	Green/Blue- R:0 G:255 B:- W:0
		087	Green R:0 G:255 B:0 W:0
		088-124	Red+/Green R:+ G:255 B:0 W:0

		125	Yellow B:0 W:0	R:255	G:255
		126-162	Red/Green- B:0 W:0	R:255	G:-
		163	Red B:0 W:0	R:255	G:0
		164-200	Red/Blue+ B:+ W:0	R:255	G:0
		201	Magenta B:255 W:0	R:255	G:0
		202-238	Red-/Blue B:255 W:0	R:-	G:0
		239	Blue B:255 W:0	R:0	G:0
		240-247	Color index,fast to slow		
		248-255	Color snap,fast to slow		
15	Plates foreground dimmer	000-255	0-100%		
16	Plates background	000-000	No function		
		001-002	White(2700K)		
		003-004	White(3200K)		
		005-006	White(4200K)		
		007-008	White(5600K)		
		009-010	White(8000K)		
		011	Blue B:255 W:0	R:0	G:0
		012-048	Green+/Blue B:255 W:0	R:0	G:+
		049	Cyan B:255 W:0	R:0	G:255

		050-086	Green/Blue- R:0 G:255 B:- W:0
		087	Green R:0 G:255 B:0 W:0
		088-124	Red+/Green R:+ G:255 B:0 W:0
		125	Yellow R:255 G:255 B:0 W:0
		126-162	Red/Green- R:255 G:- B:0 W:0
		163	Red R:255 G:0 B:0 W:0
		164-200	Red/Blue+ R:255 G:0 B:+ W:0
		201	Magenta R:255 G:0 B:255 W:0
		202-238	Red-/Blue R:- G:0 B:255 W:0
		239	Blue R:0 G:0 B:255 W:0
		240-247	Color index,fast to slow
		248-255	Color snap,fast to slow
17	Plates background dimmer	000-255	0-100%
18	Plate 1(pixels 1-7)	000-002	Plate FX All select(all on) see Plate Patterns
	FX select (see Pixel Mapping)	003-255	
19	Plate 1(pixels 1-7)	000-005	No function
	FX movement	006-124	Left to right,fast to slow
	speed & direction	125-130	No function

	(see Pixel Mapping)	131-249	Right to left,slow to fast
		250-255	No function
20	Plate 1(pixels 1-7)	000-002	Snap from cell to cell
	FX crossfade (see Pixel Mapping)	003-255	Fade duration:short to long
21	Plate 2(pixels 8-14)	000-002	Plate FX All select(all on) see Plate Patterns
	FX select (see Pixel Mapping)	003-255	
22	Plate 2(pixels 8-14) FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
23	Plate 2(pixels 8-14)	000-002	Snap from cell to cell
	FX crossfade (see Pixel Mapping)	003-255	Fade duration:short to long
24	Beam 1(pixels 1-14)	000-002	Beam FX All select(all on) see Beam Patterns
	FX select (see Pixel Mapping)	003-255	
25	Beam 1(pixels 1-14) FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
26	Beam 1(pixels 1-14)	000-002	Snap from cell to cell
	FX crossfade (see Pixel Mapping)	003-255	Fade duration:short to long
27	Beam 2(pixels 15-28) FX select (see Pixel Mapping)	000-002	Beam FX All select(all on) see Beam Patterns
		003-255	

28	Beam 2(pixels 15-28)FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
29	Beam 2(pixels 15-28) FX crossfade (see Pixel Mapping)	000-002	Snap from cell to cell
		003-255	Fade duration:short to long
30	Control*	000-005	No function
		006-010	Off (dimmer mode)
		011-015	Dimmer 1
		016-020	Dimmer 2
		021-025	Dimmer 3
		026-030	600 Hz
		031-035	1200 Hz
		036-040	2000 Hz
		041-045	4000 Hz
		046-050	6000 Hz
		051-055	25 KHz
		056-060	Fan mode auto
		060-065	Fan mode on
		066-070	Tilt reset
		071-075	Plate 1 invert off
		076-080	Plate 1 invert on
		081-085	Plate 2 invert off
		086-090	Plate 2 invert on
		091-095	Beam 1 invert off
		096-100	Beam 1 invert on
		101-105	Beam 2 invert off

		106-110	Beam 2 invert on
		111-115	Plate swap on
		116-120	Plate swap off
		121-125	Beam swap on
		126-130	Beam swap off
		131-255	No function

DMX 512 24CHs

CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Master dimmer	000-255	0-100%
4	Plate dimmer	000-255	0-100%
5	Beam dimmer	000-255	0-100%
6	Plate flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
7	Plate flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%
8	Beam flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
9	Beam flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%

10	Plates red	000-255	0-100%
11	Plates green	000-255	0-100%
12	Plates blue	000-255	0-100%
13	Beam FX	000-005	No function
		006-042	Ramp up
		043-085	Ramp down
		086-128	Ramp up-down
		129-171	Random
		172-214	Lightning
		215-255	Spikes
14	Plates foreground	000-000	No function
		001-002	White(2700K)
		003-004	White(3200K)
		005-006	White(4200K)
		007-008	White(5600K)
		009-010	White(8000K)
		011	Blue R:0 G:0 B:255 W:0
		012-048	Green+/Blue R:0 G:0 B:255 W:0
		049	Cyan R:0 G:255 B:255 W:0
		050-086	Green/Blue- R:0 G:255 B:- W:0
		087	Green R:0 G:255 B:0 W:0
		088-124	Red+/Green R:0 G:255 B:0 W:0
		125	Yellow R:255 G:255 B:0 W:0

		126-162	Red/Green- B:0	R:255 W:0	G:-
		163	Red B:0	R:255 W:0	G:0
		164-200	Red/Blue+ B:+	R:255 W:0	G:0
		201	Magenta B:255	R:255 W:0	G:0
		202-238	Red-/Blue B:255	R:- W:0	G:0
		239	Blue B:255	R:0 W:0	G:0
		240-247	Color index,fast to slow		
		248-255	Color snap,fast to slow		
15	Plates foreground dimmer	000-255	0-100%		
16	Plates background	000-000	No function		
		001-002	White(2700K)		
		003-004	White(3200K)		
		005-006	White(4200K)		
		007-008	White(5600K)		
		009-010	White(8000K)		
		011	Blue B:255	R:0 W:0	G:0
		012-048	Green+/Blue B:255	R:0 W:0	G:+
		049	Cyan B:255	R:0 W:0	G:255
		050-086	Green/Blue- B:-	R:0 W:0	G:255

		087	Green B:0 W:0	R:0 G:255
		088-124	Red+/Green B:0 W:0	R:+ G:255
		125	Yellow B:0 W:0	R:255 G:255
		126-162	Red/Green- B:0 W:0	R:255 G:-
		163	Red B:0 W:0	R:255 G:0
		164-200	Red/Blue+ B:+ W:0	R:255 G:0
		201	Magenta B:255 W:0	R:255 G:0
		202-238	Red-/Blue B:255 W:0	R:- G:0
		239	Blue B:255 W:0	R:0 G:0
		240-247	Color index,fast to slow	
		248-255	Color snap,fast to slow	
17	Plates background dimmer	000-255	0-100%	
18	Plates 1&2	000-002	Plate FX All select(all on) see Plate Patterns	
	FX select (see Pixel Mapping)	003-255		
19	Plates 1&2 FX movement speed & direction (see Pixel Mapping)	000-005	No function	
		006-124	Left to right,fast to slow	
		125-130	No function	
		131-249	Right to left,slow to fast	
		250-255	No function	

20	Plates 1 & 2	000-002	Snap from cell to cell
	FX crossfade (see Pixel Mapping)	003-255	Fade duration:short to long
21	Beams 1 & 2	000-002	Beam FX All select(all on) see Beam Patterns
	FX select (see Pixel Mapping)	003-255	
22	Beams 1 & 2 FX movement speed & direction (see Pixel Mapping)	000-005	No function
		006-124	Left to right,fast to slow
		125-130	No function
		131-249	Right to left,slow to fast
		250-255	No function
23	Beams 1 & 2	000-002	Snap from cell to cell Fade duration:short to long
	FX crossfade (see Pixel Mapping)	003-255	
24	Control*	000-005	No function
		006-010	Off (dimmer mode)
		011-015	Dimmer 1
		016-020	Dimmer 2
		021-025	Dimmer 3
		026-030	600 Hz
		031-035	1200 Hz
		036-040	2000 Hz
		041-045	4000 Hz
		046-050	6000 Hz
		051-055	25 KHz
		056-060	Fan mode auto
		060-065	Fan mode on
		066-070	Tilt reset
		071-075	Plate 1 invert off

		076-080	Plate 1 invert on
		081-085	Plate 2 invert off
		086-090	Plate 2 invert on
		091-095	Beam 1 invert off
		096-100	Beam 1 invert on
		101-105	Beam 2 invert off
		106-110	Beam 2 invert on
		111-115	Plate swap on
		116-120	Plate swap off
		121-125	Beam swap on
		126-130	Beam swap off
		131-255	No function

DMX 512 13CHs

CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Plate dimmer	000-255	0-100%
4	Beam dimmer	000-255	0-100%
5	Plate flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
6	Plate flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%

7	Beam flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
8	Beam flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%
9	Plates red	000-255	0-100%
10	Plates green	000-255	0-100%
11	Plates blue	000-255	0-100%
12	Beam FX	000-005	No function
		006-042	Ramp up
		043-085	Ramp down
		086-128	Ramp up-down
		129-171	Random
		172-214	Lightning
		215-255	Spikes
13	Control*	000-005	No function
		006-010	Off (dimmer mode)
		011-015	Dimmer 1
		016-020	Dimmer 2
		021-025	Dimmer 3
		026-030	600 Hz
		031-035	1200 Hz
		036-040	2000 Hz
		041-045	4000 Hz
		046-050	6000 Hz
		051-055	25 KHz
		056-060	Fan mode auto

		060-065	Fan mode on
		066-070	Tilt reset
		071-075	Plate 1 invert off
		076-080	Plate 1 invert on
		081-085	Plate 2 invert off
		086-090	Plate 2 invert on
		091-095	Beam 1 invert off
		096-100	Beam 1 invert on
		101-105	Beam 2 invert off
		106-110	Beam 2 invert on
		111-115	Plate swap on
		116-120	Plate swap off
		121-125	Beam swap on
		126-130	Beam swap off
		131-255	No function

DMX 512 11CHs


CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Dimmer	000-255	0-100%
4	Plate flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
5	Plate flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%

6	Beam flash duration	000-009	Classic shutter mode:disables duration control
		010-250	Slow to fast
		251-255	100% On,no flash/strobe
7	Beam flash rate	000-009	100%
		010-250	Slow to fast
		251-255	100%
8	Plates red	000-255	0-100%
9	Plates green	000-255	0-100%
10	Plates blue	000-255	0-100%
11	Beam	000-255	0-100%

DMX 512 8CHs

CH	Function	Value	Percent/Setting
1	Tilt	000-255	0-100%
2	Fine tilt	000-255	0-100%
3	Dimmer	000-255	0-100%
4	Strobe	000-009	Open
		010-079	Strobe,slow to fast
		080-149	Pulse,slow to fast
		150-219	Random Strobe,slow to fast
		220-255	Open
5	Red	000-255	0-100%
6	Green	000-255	0-100%
7	Blue	000-255	0-100%
8	Beam	000-255	0-100%

5. Photometric Diagram

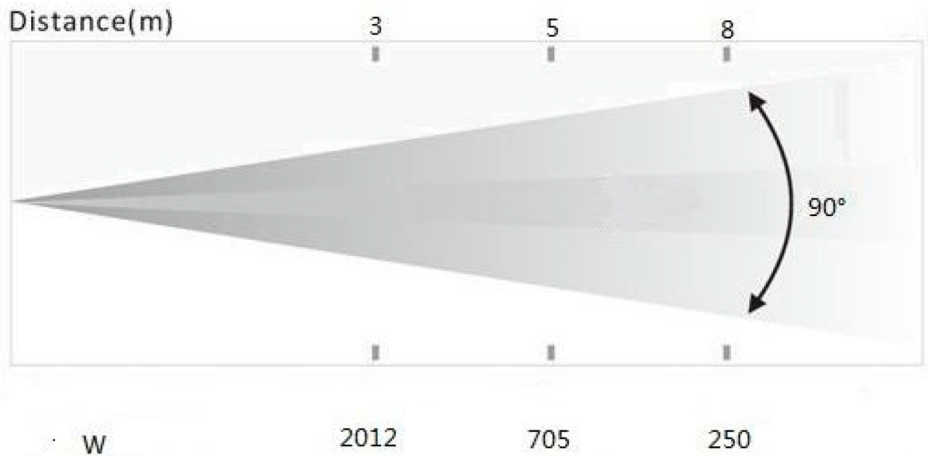

6. Production Size

